



FCN-2112/3112

**10/100/1000Base-T to 1000Base-X Switch Media Converter**  
**10/100Base-T to 100Base-X Switch Media Converter**

Network Management Manual

**Version 0.93**

## **Trademarks**

Contents subject to revise without prior notice.

All other trademarks remain the property of their owners.

## **Copyright Statement**

Copyright © 2009.

This publication may not be reproduced as a whole or in part, in any way whatsoever unless prior consent has been obtained.

## **FCC Warning**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limitations are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if no installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a different outlet from that the receiver is connected.
- Consult your local distributors or an experienced radio/TV technician for help.
- Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications to the equipment, which are not approved by the party responsible for compliance, could affect the user's authority to operate the equipment.

Copyright © 2009 All Rights Reserved.

Company has an on-going policy of upgrading its products and it may be possible that information in this document is not up-to-date. Please check with your local distributors for the latest information. No part of this document can be copied or reproduced in any form without written consent from the company.

Trademarks:

All trade names and trademarks are the properties of their respective companies.

# Table of Contents

<b>1. INTRODUCTION .....</b>	<b>4</b>
1.1 Connecting the Media Converter.....	4
<b>2. SNMP NETWORK MANAGEMENT .....</b>	<b>6</b>
<b>3. WEB MANAGEMENT .....</b>	<b>7</b>
3.1 System Information .....	8
3.2 Network Information .....	9
3.3 Module Setting .....	11
3.3.1 Network Configuration .....	11
3.3.2 Password Setting.....	12
3.3.3 Port Configuration.....	13
3.3.4 Traffic Statistics .....	14
3.3.5 SNMP Configuration .....	15
3.3.6 VLAN Configuration .....	16
3.3.6.1 VLAN Group.....	20
3.3.6.2 VLAN Per Port Setting.....	21
3.3.7 Q-in-Q Configuration.....	22
3.3.8 VLAN & Q-in-Q Example .....	23
3.3.9 TS 1000 Loopback Test .....	27
3.4 Tools .....	27
3.4.1 System Reboot .....	28
3.4.2 Save and Restore .....	28
3.4.3 Firmware Upgrade .....	28

# 1. INTRODUCTION

Thank you for purchasing the Media Converter. The built-in management module allows users to configure this Media Converter and monitor the operation status locally or remotely through the network.

## 1.1 Connecting the Media Converter

It is very important that the proper cables with the correct pin arrangement are used when connecting the Media Converter to other switches, hubs, workstations, etc.

### 1000Base-X / 100Base-FX SFP Port

The small form-factor pluggable (SFP) is a compact optical transceiver used in optical data communications applications. It interfaces with a network device mother board (for a switch, router or similar device) to a fiber optic or unshielded twisted pair networking cable. It is a popular industry format supported by several fiber optic component vendors.

SFP transceivers are available with a variety of different transmitter and receiver types, allowing users to select the appropriate transceiver for each link to provide the required optical reach over the available optical fiber type. SFP transceivers are also available with a "copper" cable interface, allowing a host device designed primarily for optical fiber communications to also communicate over unshielded twisted pair networking cable.

SFP slot for 3.3V mini GBIC module supports hot swappable SFP fiber transceiver. Before connecting other switches, workstation or media converter, make sure both sides of the SFP transfer are with the same media type, for example, 1000Base-SX to 1000Base-SX, 1000Bas-LX to 1000Base-LX. In addition to that, check the fiber-optic cable type match the SFP transfer model. To connect to 1000Base-SX transceiver, use the multi-mode fiber cable that one side must be male duplex LC connector type. To connect to 1000Base-LX transfer, use the single-mode fiber cable that one side must be male duplex LC connector type.

### 10/100/1000Base-T RJ-45 Auto-MDI/MDIX Port

The 10/100/1000Base-T RJ-45 Auto-MDI/MDIX port is located in front panel of the Media Converter. This RJ-45 port allows users to connect their traditional copper-based Ethernet/Fast Ethernet devices to the network and support auto-negotiation and MDI/MDIX auto-crossover. In other words, either crossover or straight through CAT-5E UTP or STP cable may be used.

### IP Addresses

IP addresses have the format n.n.n.n, (The default factory setting is 192.168.0.1).

IP addresses are made up of two parts:

- The first part (for example 168.168.n.n) refers to network address that identifies the network in which the device resides. Network addresses are assigned by three

allocation organizations. Depending on your location, each allocation organization assigns a globally unique network number to each network that wishes to connect to the Internet.

- The second part (for example n.n.8.100) identifies the device within the network. Assigning unique device numbers is your responsibility. If you are unsure of the IP addresses allocated to you, consult with the allocation organization where your IP addresses were obtained.

Remember that none of the two devices on a network can have the same address. If you connect to the outside, you must change all the arbitrary IP addresses to comply with those you have been allocated by the allocation organization. If you do not do this, your outside communications will not be performed.

A subnet mask is a filtering system for IP addresses. It allows you to further subdivide your network. You must use the proper subnet mask for proper operation of a network with subnets defined.

### **MIB for Network Management Systems**

Private MIB (Management Information Bases) is used to manage the Media Converter through the SNMP-based network management system. You must install the private MIB into your SNMP-based network management system first.

The MIB file is shipped together with the Media Converter. The file name extension is “.mib”, allowing SNMP-based compiler to read and compile.

## 2. SNMP NETWORK MANAGEMENT

The Simple Network Management Protocol (SNMP) is an application-layer protocol that facilitates the exchange of management information between network devices. It is part of the TCP/IP protocol suite. SNMP enables network administrators to manage network performance, find and solve network problems, and plan for network growth.

SNMP consists of the following key components:

**Managed device** is a network node that contains SNMP agent. Managed devices collect and store management information and make this information available to NMS using SNMP. Managed devices can be switches, hub, etc.

**MIB** (Management Information Base) defines the complete manageable entries of the managed device. These MIB entries can be either read-only or read-write. For example, the System Version is read-only variable. The Port State Enable or Disable is a read-write variable and a network administrator can not only read but also set its value remotely.

**SNMP Agent** is a management module resides in the managed device that responds to the SNMP Manager request.

**SNMP Manager/NMS** executes applications that monitor and control managed devices. NMS provides the bulk of the processing and memory resources required for the complete network management. SNMP Manager often composed by desktop computer/work station and software program such like HP OpenView.

Totally, 4 types of operations are used between SNMP Agent & Manager to change the MIB information. These 4 operations all use the UDP/IP protocol to exchange packets.

**GET:** This command is used by SNMP Manager to monitor managed devices. The SNMP Manager examines different variables that are maintained by managed devices.

**GET Next:** This command provides traversal operation and is used by the SNMP Manager to sequentially gather information in variable tables, such as a routing table.

**SET:** This command is used by an SNMP Manager to control managed devices. The NMS changes the values of variables stored within managed devices.

**Trap:** Trap is used by the managed device to report asynchronously a specified event to the SNMP Manager. When certain types of events occur, a managed device will send a trap to alert the SNMP Manager.


The system built-in management module also supports SNMP management. Users must install the MIB file before using the SNMP based network management system. The MIB file is on a disc or diskette that accompanies the system. The file name extension is ".mib", allowing SNMP based compiler to read and compile. Please refer to the appropriate documentation for instructions on installing the system private MIB.

### 3. WEB MANAGEMENT

The Media Converter can be managed via a Web browser. If you want to manage the Media Converter remotely, follow these steps to access the built-in management module of this Media Converter and set up the IP address:

1. When you use the Media Converter for the first time or set the Media Converter back to factory default setting, first connect one end of RJ-45 LAN cable to the RJ-45 port of the Media Converter (as the temporary RJ-45 Management port) and the other end to your computer's RJ-45 port.
2. Then, make sure your computer is set to the same IP subnet address as the Media Converter. For example, the default IP address of this Media Converter is 192.168.0.1. Your computer's IP address must be set to 192.168.1.X (where X denotes a number between 1 and 254) and subset mask to 255.255.255.0.
3. Run a Web browser and then use the default IP address of the Media Converter "**192.168.0.1**" to access the login window which is shown below.
4. Enter the username and password. The default login username is "**admin**" and **without a password**.
5. Select **Network Configuration** from **Module Setting** menu to set up your desired IP address to reach this Media Converter.
6. Once the IP address of this Media Converter is specified, you can access the Media Converter with the new IP address.
7. When you use the specified IP address to access the Media Converter, remember to connect the other end of RJ-45 cable to an Ethernet port and set your computer's IP address back to original settings.

A Login window looks like the one shown below:

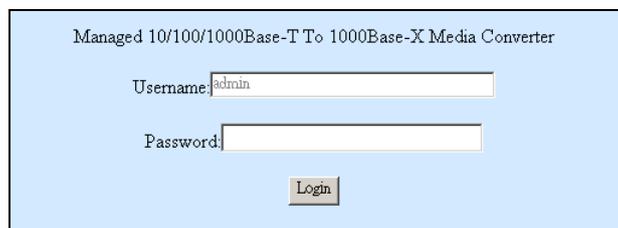

Managed 10/100/1000Base-T To 1000Base-X Media Converter

Username: admin

Password:

Login

When you use the Media Converter for the first time or set it back to the factory default settings, enter the login username "**admin**" and press Login. (By default, no password is required. Thus, leave the password field empty.) After a successful login, you will be directed to the Main Menu screen as shown below. Each menu function in the Web Management will be described in the following separate sections.

**Note:** The login username is set to “admin” permanently and can not be changed. However, the default login password can be changed to the desired one in **Password Setting** under the **Module Setting** menu. It is strongly recommended that the default password is changed to the one that is suitable for your networking environment for security reasons.

<p>System Information</p> <p>Network Information</p> <p>Module Setting</p> <p>Tools</p> <p style="text-align: center;">logout</p>	<p><b>System Information</b></p> <table border="1"> <tr> <td>Company Name</td> <td><input type="text"/></td> </tr> <tr> <td>Module Name</td> <td>Managed Media Converter</td> </tr> <tr> <td>System Object ID</td> <td>1.3.6.1.4.1.9304.50.3112</td> </tr> <tr> <td>System Contact</td> <td><input type="text"/></td> </tr> <tr> <td>System Name</td> <td><input type="text"/></td> </tr> <tr> <td>System Location</td> <td><input type="text"/></td> </tr> <tr> <td>Software Version</td> <td>1.05.00</td> </tr> <tr> <td>M/B Version</td> <td>A03</td> </tr> <tr> <td>Serial Number</td> <td>RD_Sampl000ffff</td> </tr> <tr> <td>Date Code</td> <td>20090930</td> </tr> <tr> <td>Fiber Typ</td> <td>SC 1000Mbps 550M Tx:1310nm/Rx:1310nm</td> </tr> </table> <p style="text-align: center;"><input type="button" value="Apply"/></p>	Company Name	<input type="text"/>	Module Name	Managed Media Converter	System Object ID	1.3.6.1.4.1.9304.50.3112	System Contact	<input type="text"/>	System Name	<input type="text"/>	System Location	<input type="text"/>	Software Version	1.05.00	M/B Version	A03	Serial Number	RD_Sampl000ffff	Date Code	20090930	Fiber Typ	SC 1000Mbps 550M Tx:1310nm/Rx:1310nm
Company Name	<input type="text"/>																						
Module Name	Managed Media Converter																						
System Object ID	1.3.6.1.4.1.9304.50.3112																						
System Contact	<input type="text"/>																						
System Name	<input type="text"/>																						
System Location	<input type="text"/>																						
Software Version	1.05.00																						
M/B Version	A03																						
Serial Number	RD_Sampl000ffff																						
Date Code	20090930																						
Fiber Typ	SC 1000Mbps 550M Tx:1310nm/Rx:1310nm																						

**System Information:** Name the Converter Media, specify the system name and location and check the current version information.

**Network Information:** Display device information, port status, and SFP status.

**Module Setting:** Configure DHCP, Port, VLAN, Q-in-Q function and run loopback test.

**Tools:** Restart the Media Converter, save configurations, restore backup configurations, and upgrade the latest firmware.

### 3.1 System Information

Select **System Information** from the Main Menu, and then the following screen appears.

<p><b>System Information</b></p> <p>Network Information</p> <p>Module Setting</p> <p>Tools</p> <p style="text-align: center;">logout</p>	<p><b>System Information</b></p> <table border="1"> <tr> <td>Company Name</td> <td><input type="text"/></td> </tr> <tr> <td>Module Name</td> <td>Managed Media Converter</td> </tr> <tr> <td>System Object ID</td> <td>1.3.6.1.4.1.9304.50.3112</td> </tr> <tr> <td>System Contact</td> <td><input type="text"/></td> </tr> <tr> <td>System Name</td> <td><input type="text"/></td> </tr> <tr> <td>System Location</td> <td><input type="text"/></td> </tr> <tr> <td>Software Version</td> <td>1.05.00</td> </tr> <tr> <td>M/B Version</td> <td>A03</td> </tr> <tr> <td>Serial Number</td> <td>RD_Sampl000ffff</td> </tr> <tr> <td>Date Code</td> <td>20090930</td> </tr> <tr> <td>Fiber Typ</td> <td>SC 1000Mbps 550M Tx:1310nm/Rx:1310nm</td> </tr> </table> <p style="text-align: center;"><input type="button" value="Apply"/></p>	Company Name	<input type="text"/>	Module Name	Managed Media Converter	System Object ID	1.3.6.1.4.1.9304.50.3112	System Contact	<input type="text"/>	System Name	<input type="text"/>	System Location	<input type="text"/>	Software Version	1.05.00	M/B Version	A03	Serial Number	RD_Sampl000ffff	Date Code	20090930	Fiber Typ	SC 1000Mbps 550M Tx:1310nm/Rx:1310nm
Company Name	<input type="text"/>																						
Module Name	Managed Media Converter																						
System Object ID	1.3.6.1.4.1.9304.50.3112																						
System Contact	<input type="text"/>																						
System Name	<input type="text"/>																						
System Location	<input type="text"/>																						
Software Version	1.05.00																						
M/B Version	A03																						
Serial Number	RD_Sampl000ffff																						
Date Code	20090930																						
Fiber Typ	SC 1000Mbps 550M Tx:1310nm/Rx:1310nm																						

**Company Name:** Enter a company name for this Media Converter.

**System Object ID:** View-only field that shows the predefined System OID.

**System Contact:** Enter contact information for this Media Converter.

**System Name:** Enter a unique name for this Media Converter. Use a descriptive name to identify the Media Converter in relation to your network, for example, “Backbone 1”. This name is mainly used for reference only.

**System Location:** Enter a brief description of the Media Converter location. The location is for reference only, for example, “13th Floor”.

**Software Version:** View-only field that shows the product’s firmware version.

**M/B Version:** View-only field that shows the main board version.

**Serial Number:** View-only field that shows the serial number of this Media Converter.

**Date Code:** View-only field that shows the Media Converter Firmware date code.

## 3.2 Network Information

Select **Network Information** from the Main Menu, then the following screen page appears.

The screenshot displays a web interface with a left sidebar and a main content area. The sidebar contains the following menu items: System Information, Network Information (highlighted in red), Module Setting, Tools, and a logout button. The main content area is titled "Device Information" and contains three sections: a table for Device Information, a table for Port Status, and a table for SFP Status.

Device Information		
MAC Address	00:06:19:00:09:30	
IP Address	192.168.1.197	
Gateway	192.168.0.254	
Subnet Mask	255.255.255.0	
Description	Media Converter	

Port Status		
Ports	TP	FX
Signal detect(SD)	Detected	No
Link status	On	Down
Speed	100M	
Duplex mode	Full	
Flow control	Disable	Disable
Auto negotiation	Enable	

SFP Status		
Temperature	33.03	(C)
Voltage	3.24	(V)
TX Bias	4.24	(mA)
TX Power	-5.455	(dBm)
RX Power	-29.208	(dBm)

### Device Information

**MAC Address:** View-only field that shows the MAC address of this Media Converter. You can not change MAC address of this Media Converter.

**IP Address:** View-only field that shows the IP address of this Media Converter. You can change the IP address to the desired one in **Network Configuration** under the **Module Setting** Menu.

**Gateway:** View-only field that shows the Gateway address of this Media Converter. You can change the Gateway address to the desired one in **Network Configuration** under the **Module Setting** Menu.

**Subnet Mask:** View-only field that shows the Subnet Mask of this Media Converter. You can change the Subnet Mask to the desired one in **Network Configuration** under the **Module Setting** Menu.

**Description:** View-only field that shows the description you indicate. You can change the description in **Network Configuration** under the **Module Setting** Menu.

## Port Status

**Signal detect (SD):** View-only field that shows whether the signal TP and FX is detected or not.

**Link status:** View-only field that shows the link status of TP and FX. If the link is up, "On" will be shown.

**Speed:** View-only field that shows the current speed of TP and FX.

**Duplex mode:** View-only field that shows whether TP and FX are in full-duplex or half-duplex mode.

**Flow control:** View-only field that shows whether TP and FX's flow control function is enabled or not.

**Auto negotiation:** View-only field that shows whether TP and FX's auto negotiation function is enabled or not.

## SFP Status

**Temperature:** View-only field that shows the slide-in SFP module operation temperature.

**Voltage (V):** View-only field that shows the slide-in SFP module operation voltage.

**TX Power (dbm):** View-only field that shows the slide-in SFP module optical Transmission power.

**RX Power (dbm):** View-only field that shows the slide-in SFP module optical Receiver power.

### 3.3 Module Setting

Select **Module Setting** and then the following screen page appears.

The screenshot shows the 'NetWork Configuration' page. On the left is a navigation menu with categories: System Information, Network Information, Module Setting (containing Network Configuration, Password Setting, Port Configuration, Traffic Statistic, SNMP Configuration, VLAN Configuration, Q-in-Q Configuration, and TS1000 Loop Back), and Tools (containing logout). The main content area is titled 'NetWork Configuration' and contains a table with the following fields: DHCP Client (set to 'Disable'), IP Address (192.168.1.197), Subnet Mask (255.255.255.0), Gateway (192.168.0.254), and Description (Media Converter). Below the table is an 'Apply & Save To Flash' button.

**Network Configuration:** To enable or disable DHCP function and specify the desired IP address, subnet mask, gateway and description.

**Password Setting:** Set up a new password for website access.

**Port Configuration:** Specify ports' speed, duplex mode, ingress rate limit and egress rate limit and enable or disable flow control function.

**Traffic Statistics:** Display traffic statistics information of this Media Converter.

**SNMP Configuration:** To enable or disable SNMP and Trap function.

**VLAN Configuration:** To enable or disable VLAN mode. If "enabled", the user can further specify ports' VLAN Group and egress link type.

**Q-in-Q Configuration:** To enable or disable Q-in-Q. If "enabled", the user can further specify tag protocol identifier (TPID) and Q-in-Q direction.

**TS 1000 Loop Back:** Run a loopback test.

#### 3.3.1 Network Configuration

Select **Network Configuration** from **Module Setting** menu, then the following screen page appears.

This screenshot is similar to the previous one but includes an attention warning at the bottom of the main content area. The warning text reads: "Attention: After 'Apply & Save To Flash' is pressed, please DO NOT turn off the power immediately. The system needs at least 8 seconds to write configurations to Flash." The 'Apply & Save To Flash' button is visible above this warning.

**DHCP Client:** To enable or disable DHCP function. When “Enabled”, the IP address will be automatically assigned from DHCP Server. When “Disabled”, you need to specify Media Converter’s IP address, subnet mask, and gateway.

---

**NOTE:** When DHCP is enabled and “Apply & Save to Flash” is clicked, the web management connection will be terminated immediately. However, please wait for at least 8 seconds to let the Converter write configurations to Flash before powering down. If the converter is powered down immediately after “Apply& Save to Flash” is clicked, this might result in Flash crashes.

---

**IP Address:** When DHCP is disabled, you can specify your desired IP address.

**Subnet Mask:** When DHCP is disabled, you can specify your desired subnet mask.

**Gateway:** When DHCP is disabled, you can specify your gateway address.

**Description:** Specify a name or give a brief description to this Media Converter.

**Apply & Save To Flash:** Click “Apply & Save To Flash” to change and save your setting.

### 3.3.2 Password Setting

Select **Password Setting** from **Module Setting** menu, then the following screen page appears.

<b>System Information</b>	<b>Password Setting</b>
<b>Network Information</b>	Login Name <input type="text" value="admin"/>
<b>Module Setting</b>	Old Password <input type="text"/>
NetWork Configuration	New Password <input type="text"/>
<b>Password Setting</b>	Confirm <input type="text"/>
Port Configuration	<input type="button" value="Apply"/>
Traffic Statistic	
SNMP Configuration	
VLAN Configuration	
Q-in-Q Configuration	
TS1000 Loop Back	
<b>Tools</b>	
logout	

**Login Name:** View-only filed. This default login name can not be changed.

**Old Password:** Type in your old password.

**New Password:** Type in your new password.

**Confirm:** Re-type your new password to confirm.

**Apply:** Click “Apply” to change your login password to the one specified.

---

**NOTE:** If you forget the login password, the only way to gain access to the Web Management is to set the Media Converter back to the factory default setting by pressing the Diag. button for 10 seconds (The Diag. button is located on the Front Panel of the Media Converter.). When the Media Converter returns back to the default setting, you can

---

---

login with the default password (By default, no password is required. Thus, leave the field empty and then press Login.) See Page 8 for login procedure when setting the Media Converter back to the factory default setting.

---

### 3.3.3 Port Configuration

Select **Port Configuration** from **Module Setting** menu, then the following screen page appears.

Port	Link	Mode	Flow Control	Ingress Rate Limit (kbps)	Egress Rate Limit (kbps)
TP	100F	Auto Speed	Disabled	Not Limit	Not Limit
FX	Down	Auto Mode	Disabled	Not Limit	Not Limit

Apply Refresh

Rate limit is 64kbps as a minimal step

**Port:** There are two kinds of ports in this Media Converter, these are TP and FX.

**Link:** This shows the current link status of TP and FX port. For example, when the link is down, it will display “Down”. When the link is connected, it will display the current speed and mode status.

**Mode:** Select the desired speed or/and duplex mode. For TP port, there are six options available from the pull-down menu, these are “Auto Speed”, “1000 Full”, “100 Full”, “100 Half”, “10 Full”, and “10 Half”. For FX port, “Auto mode” and “Force mode” are available.

**Flow Control:** To enable or disable flow control function.

**Ingress Rate Limit (kbps):** Select the ingress rate limit from the pull-down menu. “Not Limit” indicates “0” kbps. If you want to specify your own rate limit, you can select “User Setting” and then state your desired rate limit in the corresponding space.

**Egress Rate Limit (kbps):** Select the egress rate limit from the pull-down menu. “Not Limit” indicates “0” kbps. If you want to specify your own rate limit, you can select “User Setting” and then state your desired rate limit in the corresponding space.

**Apply:** Click “Apply” to change and save the setting.

**Refresh:** Click “Refresh” to refresh the current status.

---

**NOTE:** When DIP 8 (on the Rear Panel of the Media Converter) is set to “ON” (which means that Mode and Flow Control will be set according to configurations in DIP Switch), you can not change TP and FX’s Mode and Flow Control in Web Management. On the other hand, when DIP 8 is set to “OFF” (which means that Mode and Flow Control will be set according to configurations in Web Management), DIP 1~5 setting (set to “ON”) will be ignored.

---

### 3.3.4 Traffic Statistics

Select **Traffic Statistics** from **Module Setting** menu, then the following screen page appears.

Traffic Statistic			
(The following counter means the port received number)			
Port	TP	FX	GPU
Total Bytes	143796	0	69615
Total Pkts	1235	0	123
Total Error Pkts	0	0	0
Unicast Pkts	158	0	122
Multicast Pkts	225	0	0
Broadcast Pkts	852	0	1
64	598	0	72
65-127	389	0	0
128-255	131	0	3
256-511	116	0	2
512-1023	1	0	7
1024-1518	0	0	39
Undersize Pkts	0	0	0
Oversize Pkts	0	0	0
Fragments	0	0	0
CRC Errors	0	0	0
Jabbers	0	0	0
Drop Events	0	0	0
Pause Frames	0	0	0

**Total Bytes:** View-only field that shows the number of received frames on each port.

**Total Pkts:** View-only field that shows the number of total packets received on each port.

**Total Error Pkts:** View-only field that shows the number of total error packets received on each port.

**Unicast Pkts:** View-only field that shows the number of unicast packets received.

**Multicast Pkts:** View-only field that shows the number of multicast packets received.

**Broadcast Pkts:** View-only field that shows the number of broadcast packets received.

**64:** View-only field that shows the number of 64byte packets received on each port.

**65-127:** View-only field that shows the number of packets between 65 and 127 bytes received on each port.

**128-288:** View-only field that shows the number of packets between 128 and 288 bytes received on each port.

**256-511:** View-only field that shows the number of packets between 256 and 511 bytes received on each port.

**512-1023:** View-only field that shows the number of packets between 512 and 1023 bytes received on each port.

**1024-1518:** View-only field that shows the number of packets between 1024 and 1518 bytes received on each port.

**Undersize Pkts:** View-only field that shows the number of undersized packets (smaller than 64 bytes) received on each port.

**Oversize Pkts:** View-only field that shows the number of untagged packets greater than 1518 bytes and tagged packets greater than 1522 bytes received on each port.

**Fragments:** View-only field that show the number of packets that are less than 64 bytes (excluding framing bits) and have either an FCS error or an alignment error.

**CRC Errors:** View-only field that show messages of CRC (cyclic redundancy check) data errors.

**Jabbers:** View-only field that shows the number of packets that are longer than 1522 bytes and have either an FCS error or an alignment error.

**Drop Events:** View-only field that shows the number of dropped events received on each port.

**Pause Frames:** View-only field that shows the number of pause frames received on each port.

**Clear:** Click “Clear” to clear all statistics shown on the table.

**Refresh:** Click “Refresh” to refresh the counter.

### 3.3.5 SNMP Configuration

Select **SNMP Configuration** from **Module Setting** menu, then the following screen page appears.

SNMP Configuration	
SNMP Ability	Disable
Trap mode	Disable
SNMP Trap IP Address	0.0.0.0
Read Community	public
Read_Write Community	private

Apply

**SNMP Ability:** To enable or disable SNMP.

**Trap Mode:** To enable or disable trap mode. When enabled, a trap will be sent when the following events occur.

**Cold Start:** When the Media Converter operates cold start, a trap notice will be sent.

**Power Down:** When the Media Converter is power down, a trap notice will be sent.

**Link Up:** When TP or FX link is established, a trap notice will be sent.

**Link Down:** When TP or FX link is disconnected, a trap notice will be sent.

**SNMP Trap IP Address:** Specify the IP address to which the trap will be sent.

**Read Community:** Specify a username for SNMP login, up to 31 characters. This allows users to read only.

**Read\_Write Community:** Specify a username for SNMP login, up to 31 characters. This allows users to read and make some setting changes.

**Apply:** Click “**Apply**”, and then configurations and changes will be saved.

### 3.3.6 VLAN Configuration


A Virtual Local Area Network (VLAN) is a network topology configured according to a logical scheme rather than the physical layout. VLAN can be used to combine any collections of LAN segments into a group that appears as a single LAN. VLAN also logically segments the network into different broadcast domains. All broadcast, multicast, and unknown packets entering the Converter on a particular VLAN will only be forwarded to the stations or ports that are members of that VLAN.

VLAN can enhance performance by conserving bandwidth and improve security by limiting traffic to specific domains. A VLAN is a collection of end nodes grouped by logics instead of physical locations. End nodes that frequently communicate with each other are assigned to the same VLAN, no matter where they are physically located on the network. Another benefit of VLAN is that you can change the network topology without physically moving stations or changing cable connections. Stations can be ‘moved’ to another VLAN and thus communicate with its members and share its resources, simply by changing the port VLAN settings from one VLAN to another. This allows VLAN to accommodate network moves, changes and additions with the greatest flexibility.

#### 802.1Q VLAN Concept

Port-Based VLAN is simple to implement and use, but it cannot be deployed across converters VLAN. The 802.1Q protocol was developed in order to provide the solution. By tagging VLAN membership information to Ethernet frames, the IEEE 802.1Q can help network administrators break large networks into smaller segments so that broadcast and multicast traffic will not occupy too much available bandwidth as well as provide a higher level security between segments of internal networks.

## Introduction to 802.1Q frame format:

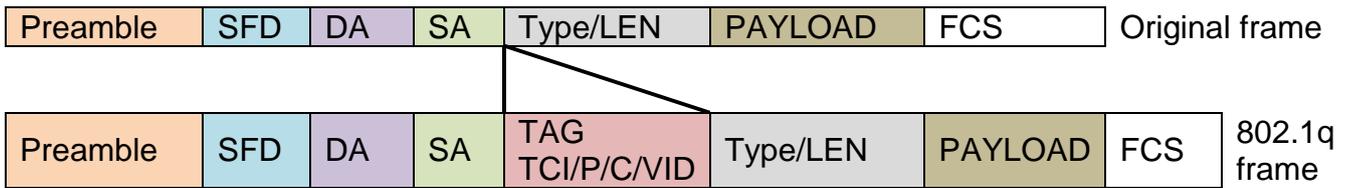

PRE	Preamble	62 bits	Used to synchronize traffic
SFD	Start Frame Delimiter	2 bits	Marks the beginning of the header
DA	Destination Address	6 bytes	The MAC address of the destination
SA	Source Address	6 bytes	The MAC address of the source
TCI	Tag Control Info	2 bytes	Set to 8100 for 802.1p and Q tags
P	Priority	3 bits	Indicates 802.1p priority level 0-7
C	Canonical Indicator	1 bit	Indicates if the MAC addresses are in Canonical format - Ethernet set to "0"
VID	VLAN Identifier	12 bits	Indicates the VLAN (0-4095)
T/L	Type/Length Field	2 bytes	Ethernet II "type" or 802.3 "length"
Payload < or = 1500 bytes		User data	
FCS	Frame Check Sequence	4 bytes	Cyclical Redundancy Check

## Important VLAN Concepts for Configuration

There are two key concepts to understand.

- The Default Port VLAN ID (**PVID**) specifies the VID to the port that will assign the VID to untagged traffic from that port.
- The VLAN ID (**VID**) specifies the set of VLAN that a given port is allowed to receive and send **labeled** packets.

Both variables can be assigned to a port, but there are significant differences between them. Administrators can only assign one PVID to each port (since the 802.1Q protocol assigns any single packet to just one VLAN). The PVID defines the default VLAN ID tag that will be added to un-tagged frames receiving from that port (ingress traffic).

On the other hand, a port can be defined as a member of multiple VLAN (multiple VID). These VID's constitute an access list for the port. The access list can be used to filter tagged ingress traffic (the converter will drop a tagged packet tagged as belonging in one VLAN if the port on which it was received is not a member of that VLAN). The converter also consults the access list to filter packets it sends to that port (egress traffic). Packets will not be forwarded unless they belong to the VLANs that the port is one of the members.

The differences between **Ingress** and **Egress** configurations can provide network segmentation. Moreover, they allow resources to be shared across more than one VLAN.

## Important VLAN Definitions

### Ingress

The point at which a frame is received on a converter and the decisions must be made. The converter examines the VID (if present) in the received frames header and decides whether or not and where to forward the frame. If the received frame is untagged, the converter will tag the frame with the PVID for the port on which it was received. It will then use traditional Ethernet bridging algorithms to determine the port to which the packet should be forwarded.

Next, it checks to see if each destination port is on the same VLAN as the PVID and thus can transmit the frame. If the destination port is a member of the VLAN used by the ingress port, the frame will be forwarded. If the received frame is tagged with VLAN information, the converter checks its address table to see whether the destination port is a member of the same VLAN. Assuming both ports are members of the tagged VLAN, the frame will be forwarded.

### Ingress Filtering

The process of checking an incoming frame and comparing its VID with the ingress port VLAN membership is known as Ingress Filtering.

On the Media Converter, it can be either enabled or disabled.

1. When an **untagged** frame is received, the **ingress** port **PVID** will be applied to the frame.
2. When a **tagged** frame is received, the **VID** in the frame tag is used.

When Ingress Filtering is “Enabled”, the Media Converter will first determine,

1. If the **ingress** port itself is a member of the frame VLAN, it will receive the frame.
2. If the **ingress** port is not a member of the frame VLAN, the frame will be dropped.
3. If it is a member of that VLAN, the Media Converter then checks its address table to see whether the destination port is a member of the same VLAN. Assuming both ports are members of that VLAN, the frame will be forwarded.

Administrators should make sure that each port's **PVID** is set up; otherwise, incoming frames may be dropped if **Ingress Filtering** is enabled. On the other hand, when Ingress Filtering is disabled, the Media Converter will not compare the incoming frame **VID** with the **ingress** port VLAN membership. It will only check its address table to see whether the destination VLAN exists.

1. If the VLAN is unknown, it will be broadcasted.
2. If the VLAN and the destination MAC address are known, the frame will be forwarded.
3. If the VLAN is known and the destination MAC address is unknown, the frame will be flooded to all ports in the VLAN.

## Tagging


Every port on an 802.1Q compliant converter can be configured as tagging or un-tagging.

Ports with taggings Enable will put the VID number, priority and other VLAN information into the header of all packets that flow into and out of it. If a packet has been tagged previously, the port will not alter the packet and keep the VLAN information intact. The VLAN information in the tag can then be used by other 802.1Q compliant devices on the network to make packet forwarding decisions.

## Un-tagging

Ports with un-taggings Enable will strip the 802.1Q tag from all packets that flow into and out of those ports. If the packet does not have an 802.1Q VLAN tag, the port will not alter the packet. Thus, all packets received by and forwarded by an un-tagging port will have no 802.1Q VLAN information. Un-tagging is used to send packets from an 802.1Q-compliant network device to a non-compliant network device. Simply put, un-tagging means that once you set up the port as “U” (untagged), all egress packets (in the same VLAN group) from the port will have no tags.

Select **VLAN Configuration** from **Module Setting** menu, then the following screen page appears.

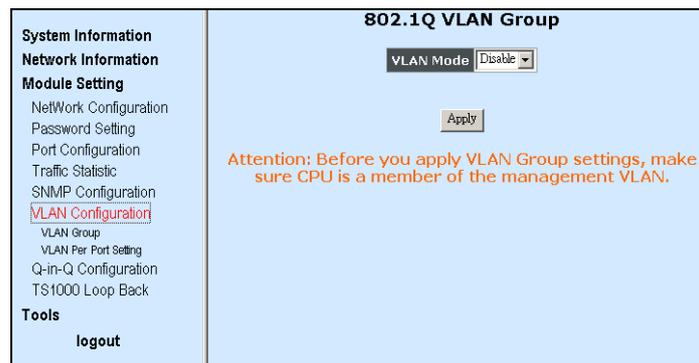

**VLAN Group:** To enable or disable VLAN Mode. When enabled, you can further indicate a VID to the selected ports.

**VLAN Per Port Setting:** To set up each port’s egress link type and VID.

### 3.3.6.1 VLAN Group

Select **VLAN Group**, then the following screen page appears.

The screenshot shows the configuration page for the 802.1Q VLAN Group. On the left is a navigation menu with categories: System Information, Network Information, Module Setting (containing NetWork Configuration, Password Setting, Port Configuration, Traffic Statistic, SNMP Configuration, VLAN Configuration, **VLAN Group**, VLAN Per Port Setting, Q-in-Q Configuration, and TS1000 Loop Back), and Tools (containing logout). The main area is titled "802.1Q VLAN Group" and features a "VLAN Mode" dropdown menu currently set to "Disable" and an "Apply" button. A red warning message states: "Attention: Before you apply VLAN Group settings, make sure CPU is a member of the management VLAN."

**VLAN Mode:** To enable or disable VLAN Mode. When “enable” is selected, the following screen page will appear to allow you to further indicate a VID to the selected ports.

The screenshot shows the configuration page for the 802.1Q VLAN Group with "VLAN Mode" set to "Enable". It includes the same navigation menu as the previous screenshot. The main area contains a table for configuring VLAN groups and their members. The table has columns for "VLAN Group", "VID", and "Member" (with sub-columns for TP, FX, and CPU). All 16 VLAN groups (0-15) are listed, each with a VID field and checkboxes for TP, FX, and CPU. An "Apply" button is located at the bottom of the table.

VLAN Group	VID	Member		
		TP	FX	CPU
0	1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
3	4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
4	5	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
5	6	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
6	7	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
7	8	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
8	9	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
9	10	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
10	11	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
11	12	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
12	13	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
13	14	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
14	15	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
15	16	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

**VLAN Group:** There are 16 VLAN Groups available from 0 to 15.

**VID:** Specify a VID (1~4094) to each VLAN Group.

**Member:** Check the TP, FX, or CPU box in each VLAN Group to enable them to carry the same VID and belong to the same VLAN Group.

### 3.3.6.2 VLAN Per Port Setting

Select **VLAN Per Port Setting**, then the following screen page appears.

Port	Egress Link Type	Port VLAN Entry
TP	Don't Touch Tag	0
FX	Don't Touch Tag	1
CPU		2

Ingress Filter: Disable

Apply

Attention: Before you apply VLAN Per Port settings, make sure management traffic can go through CPU.

**Port:** This column indicates the ports available; these are TP, FX, and CPU.

**Egress Link Type:** Select the needed egress link type from the pull-down menu. Please note that when Q-in-Q is enabled, settings in Egress Link Type will be disabled.

**Replace Tag:** This will change the VID of packets to the specified one.

**Remove Tag:** This will remove packets' VID.

**Add Tag:** This will add the specified VID to packets.


**Don't Touch Tag:** This will keep packets intact.

**Port VLAN Entry:** Select each port's corresponding VLAN Group from the pull-down menu. When you specify "Add Tag" as Egress Link Type, the tag selected here will be added to the packet.

**Ingress Filter:** To enable or disable ingress filter.

### 3.3.7 Q-in-Q Configuration

Select **Q-in-Q Configuration** from **Module Setting** menu, then the following screen page appears.

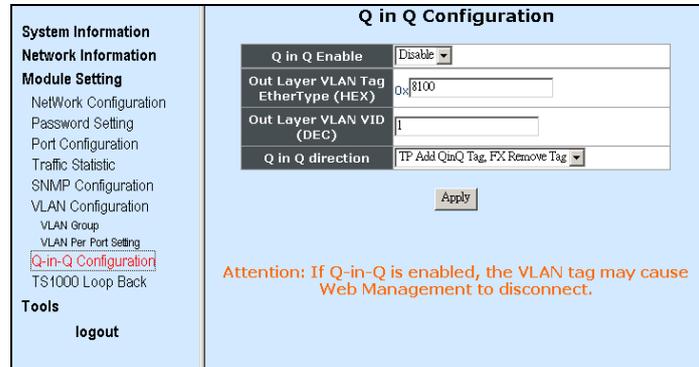

Q in Q Configuration	
Q in Q Enable	Disable
Out Layer VLAN Tag EtherType (HEX)	0x8100
Out Layer VLAN VID (DEC)	1
Q in Q direction	TP Add QinQ Tag, FX Remove Tag

Apply

Attention: If Q-in-Q is enabled, the VLAN tag may cause Web Management to disconnect.

**Q in Q Enable:** To enable or disable Q-in-Q function. When Q-in-Q is enabled, settings in Egress Link Type will be disabled.

**Out Layer VLAN Tag EtherType (HEX):** Specify the tag protocol identifier (TPID) value of VLAN tags.

**Out Layer VLAN VID (DEC):** Specify the VID (1~4094).

**Q in Q Direction:** Select Q-in-Q direction from the pull-down menu.

**TP Add Q in Q Tag, FX Remove Tag:** TP port inserts a Q-in-Q tag and FX port removes a Q-in-Q tag.

**FX Add Q in Q Tag, TP Remove Tag:** FX port inserts a Q-in-Q tag and FX port removes a Q-in-Q tag.

---

**NOTE:** When traffic is untagged and Q-in-Q is enabled with proper settings, the traffic will be forwarded out with only one tag (Out Layer VLAN VID).


---

### 3.3.8 VLAN & Q-in-Q Example

In this section, two example figures are provided to explain the VLAN and Q-in-Q configurations.

#### Application Example 1:

As illustrated below, TP port is connected to the customer device that has incoming traffic with VLAN 100. If you want traffic forwarded out FX port to be added with a double tag 1000, then follow the steps below to accomplish the process.

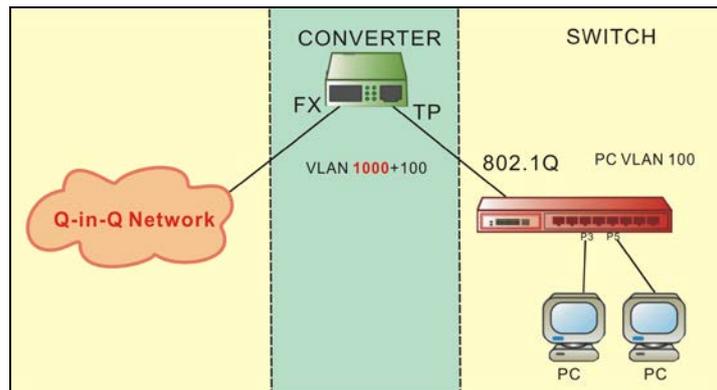

### VLAN Group

**System Information**

**Network Information**

**Module Setting**

- Network Configuration
- Password Setting
- Port Configuration
- Traffic Statistic
- SNMP Configuration
- VLAN Configuration
- VLAN Group
- VLAN Per Port Setting
- Q-in-Q Configuration
- TS1000 Loop Back
- 802.3ah Function

**Tools**

logout

**802.1Q VLAN Group**

VLAN Mode: Enable

VLAN Group	VID	Member		
		TP	FX	CPU
0	1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1	100	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	1000	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
3	4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
4	5	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
5	6	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
6	7	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
7	8	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
8	9	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
9	10	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
10	11	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
11	12	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
12	13	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
13	14	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
14	15	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
15	16	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Step 1. By default, VLAN mode is disabled. Make sure you enable VLAN mode before carrying on the following steps.

Step 2. Specify VID 100 and 1000 in VLAN Group 1 and 2 respectively. Select TP, FX, and CPU as member ports in VLAN Group 1 and 2 (When CPU is selected as a member, the VLAN becomes management VLAN.).

Step 3. Click “Apply” to make settings effective.

## VLAN Per Port Setting

Step 1. Check whether Q-in-Q is enabled. When enabled, settings in Egress Link Type will be disabled. In this example, Q-in-Q is enabled; thus, this decision ignores Egress Link Type settings.

Step 2. Check whether you have set up 802.1Q VLAN Group Table. When incoming traffic is with a tag, the forwarding process will be executed according to settings in 802.1Q VLAN Group Table. In this example, 802.1Q VLAN Group Table has already set up.

## Q-in-Q Configuration

Q in Q Configuration	
Q in Q Enable	Enable
Out Layer VLAN Tag EtherType (HEX)	0x8100
Out Layer VLAN VID (DEC)	1000
Q in Q direction	FX Add QinQ Tag, TP Remove Tag
<input type="button" value="Apply"/>	
<b>Attention: If Q-in-Q is enabled, the VLAN tag may cause Web Management to disconnect.</b>	

**System Information**


**Network Information**

**Module Setting**

- NetWork Configuration
- Password Setting
- Port Configuration
- Traffic Statistic
- SNMP Configuration
- VLAN Configuration
  - VLAN Group
  - VLAN Per Port Setting
- Q-in-Q Configuration
- TS1000 Loop Back
- 802.3ah Function

**Tools**

- logout

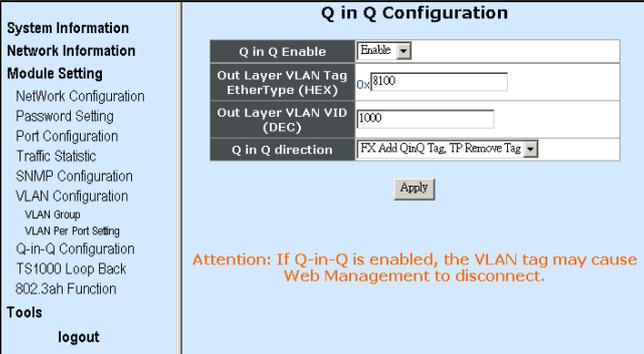

Step 1. By default, Q-in-Q is disabled. Make sure Q-in-Q is enabled before apply the settings.


Step 2. Enter the TPID to identify the frame as the IEEE 802.1q-tagged frame. The value is usually set to 8100. However, you can also enter the TPID (such as 88A8, 9100) that is suitable for your networking environment.

Step 3. Enter the outer VLAN ID. In this example, the outer VLAN ID is 1000.

Step 4. Decide to add a double tag to or remove a double tag from egress traffic. In this example, “FX Add QinQ Tag, TP remove Tag” is selected to accomplish the process of the provided scenario. (Egress traffic from FX port has already had a tag with VID 100. The other tag with VID 1000 will also be added.)

## Application Example 2:

In this backbone scenario, suppose two stand-alone Converters are used to extend the distance up to 80KM (depending on the models used). On the left-hand side, PC1 is the management PC that can manage the “Converter 1” remotely via the TP port. PC2 and PC4 are in the same VLAN 110 and should be able to communicate with each other. PC3 and PC5 are also in the same VLAN 220 and should be able to communicate with each other. To allow management and data traffic to flow to and from the Converter in this scenario, the following steps to configure “Converter 1” are suggested.

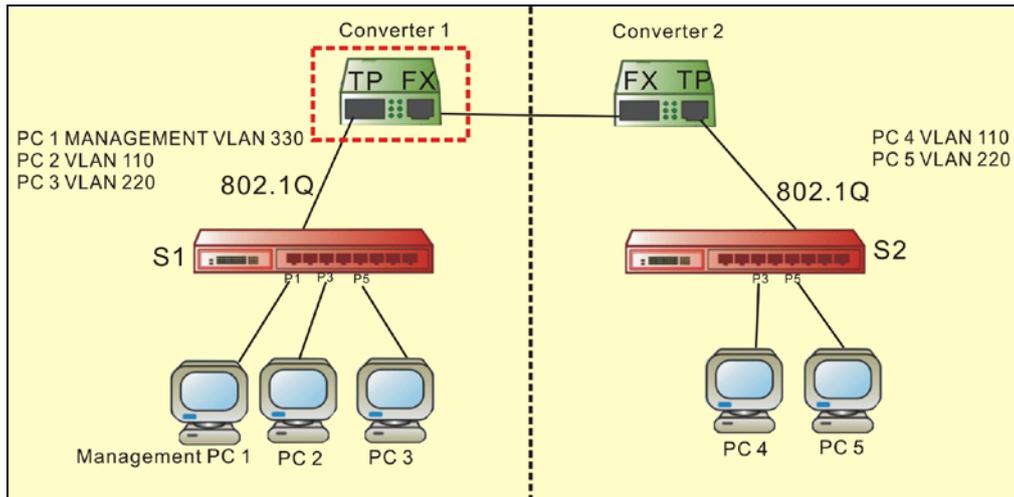

## 802.1Q VLAN Group

System Information		802.1Q VLAN Group			
Network Information		VLAN Mode <input type="text" value="Enable"/>			
Module Setting		Member			
VLAN Group	VID	TP	FX	CPU	
0	110	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
1	220	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
2	330	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	

Step 1. By default, VLAN mode is disabled. Make sure you enable VLAN mode before carrying on the following steps.

Step 2. Specify VID 110, 220, 330 in VLAN Group 0, 1, 2 respectively. Select TP and FX in VLAN Group 0 and 1 and select TP and CPU in VLAN Group 2 (When CPU is selected as a member, the VLAN becomes management VLAN.).

Step 3. Click “Apply” to make settings effective.

## 802.1Q VLAN Per Port Setting

**System Information**

**Network Information**

**Module Setting**

- NetWork Configuration
- Password Setting
- Port Configuration
- Traffic Statistic
- SNMP Configuration
- VLAN Configuration
  - VLAN Group
  - VLAN Per Port Setting
- Q-in-Q Configuration
- TS1000 Loop Back

**Tools**

logout

### 802.1Q VLAN Per Port Setting


Port	Egress Link Type	Port VLAN Entry
TP	Add Tag	2
FX	Dont Touch Tag	1
CPU		2

Ingress Filter: Disable


Apply

Attention: Before you apply VLAN Per Port settings, make sure management traffic can go through CPU.

Step 1. Set TP port's Egress Link Type to "Add Tag" and select VLAN Group 2 (330). When Management PC1 sends out a frame, the Converter will remove VLAN tag 330 within a frame. To ensure the link will not be disconnected due to the lack of the appropriate tag, TP port's Egress traffic should be added a tag 330.

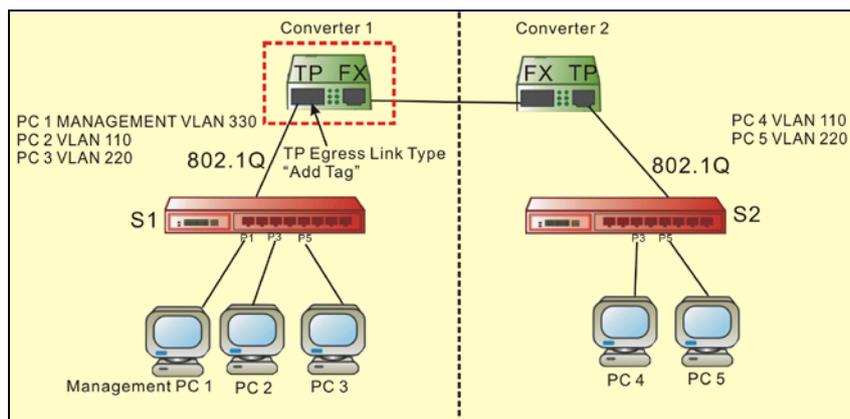

Step 2. Set FX port's Egress Link Type to "Don't Touch Tag". When PC2 wants to send a frame to PC4, the Converter will forward it out FX port directly based on settings in "802.1Q VLAN Group".

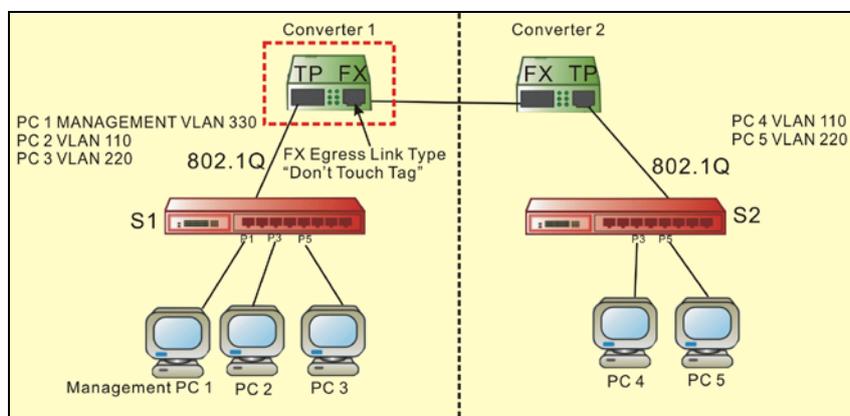

Step 3. Select VLAN Group 2 as CPU's Port VLAN Entry setting.

### 3.3.9 TS 1000 Loopback Test

Select **Loopback Test** from **Module Setting** menu, then the following screen page appears.

<b>System Information</b>	<b>TS1000 Loop Back Test</b>
<b>Network Information</b>	<b>Send Packet Number</b> <input type="text" value="100"/> (1~255)
<b>Module Setting</b>	<input type="button" value="Apply"/>
NetWork Configuration	
Password Setting	
Port Configuration	
Traffic Statistic	
SNMP Configuration	
VLAN Configuration	
VLAN Group	
VLAN Per Port Setting	
Q-in-Q Configuration	
<b>TS1000 Loop Back</b>	
<b>Tools</b>	
logout	

**Send Packet Number:** Specify the number of packets for loopback test. By default, the number of packets sent is 100.

**Apply:** Click “Apply”, then loopback test will be performed.

## 3.4 Tools

Select **Tools** from the main menu, then the following screen page appears.

<b>System Information</b>	<b>TS1000 Loop Back Test</b>
<b>Network Information</b>	<b>Send Packet Number</b> <input type="text" value="100"/> (1~255)
<b>Module Setting</b>	<input type="button" value="Apply"/>
<b>Tools</b>	
System Reboot	
Save and Restore	
Firmware Upgrade	
<b>logout</b>	


**System Reboot:** Restart the Media Converter.

**Save and Restore:** Save all configurations to flash, load previous configurations, and reset the Media Converter back to factory default settings.

**Firmware Upgrade:** Upgrade the latest firmware.


### 3.4.1 System Reboot

Select **System Reboot**, then the following screen page appears.

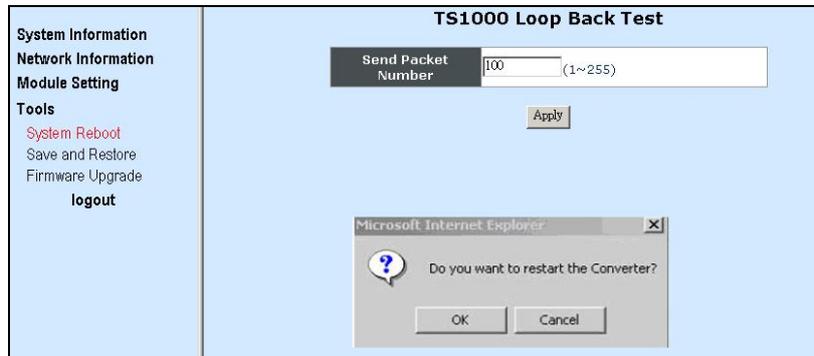

### 3.4.2 Save and Restore

Select **Save and Restore**, then the following screen page appears.

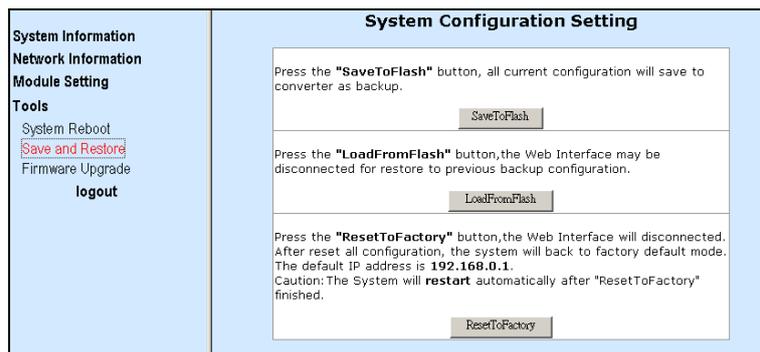

### 3.4.3 Firmware Upgrade

Select **Firmware Upgrade**, then the following screen page appears.

