


CopperLink[™] Model CL1211E/CL1212E Industrial High Speed Ethernet Extender

User Manual

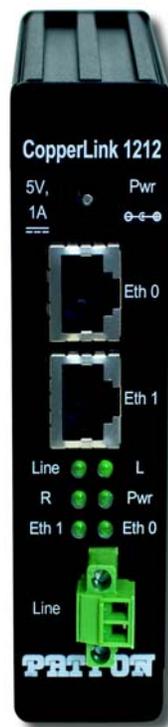

This is a Class A device and is not intended for use in a residential environment.

Sales Office: +1 (301) 975-1000
Technical Support: +1 (301) 975-1007
E-mail: support@patton.com
WWW: www.patton.com

Part Number: 07MCL1211E-CL1212E-UM Rev. G
Revised: March 11, 2020

Patton Electronics Company, Inc.

7622 Rickenbacker Drive
Gaithersburg, MD 20879 USA
Tel: +1 (301) 975-1000
Fax: +1 (301) 869-9293
Support: +1 (301) 975-1007
Web: www.patton.com
E-mail: support@patton.com

Trademark Statement

The term *CopperLink* is a trademark of Patton Electronics Company. All other trademarks presented in this document are the property of their respective owners.

Copyright © 2014–2017, Patton Electronics Company. All rights reserved.

The information in this document is subject to change without notice. Patton Electronics assumes no liability for errors that may appear in this document.

Warranty Information

Patton Electronics warrants all CopperLink components to be free from defects, and will—at our option—repair or replace the product should it fail within one year from the first date of the shipment.

This warranty is limited to defects in workmanship or materials, and does not cover customer damage, abuse or unauthorized modification. If the product fails to perform as warranted, your sole recourse shall be repair or replacement as described above. Under no condition shall Patton Electronics be liable for any damages incurred by the use of this product. These damages include, but are not limited to, the following: lost profits, lost savings and incidental or consequential damages arising from the use of or inability to use this product. Patton Electronics specifically disclaims all other warranties, expressed or implied, and the installation or use of this product shall be deemed an acceptance of these terms by the user.

Summary Table of Contents

- 1 General information 12
- 2 Installation 16
- 3 Configuration 27
- 4 Operation 32
- 5 Contacting Patton for assistance 34
- A Compliance Information 37
- B Specifications 40
- C Factory Replacement Parts and Accessories 42
- D Interface Pin Assignment 44
- E Line Rate & Reach Chart 47

Table of Contents

Summary Table of Contents	3
Table of Contents	4
List of Figures	6
List of Tables	7
About This Guide	8
Safety When Working With Electricity	10
1 General information	12
Overview	13
Features	13
Description.....	13
Front panel description.....	15
2 Installation	16
Planning the Installation.....	17
Installing accessories	17
Installing the DIN Rail Installation Kit; 35MM (INS/A-DIN-35)	17
Installing the 19" Rackmount Adjustable Depth 35MM DIN Rail Kit (NS-1001R-19ADJDIN)	20
Installing the Mounting Ears Installation Kit (INS-KIT-MNTEARS)	21
Installing the Mounting Plate Installation Kit (INS-KIT-MNTPLATE)	23
Connecting the Line Interface	23
Connecting the RJ-45 Line Interface	24
Connecting the Terminal Block Line Interface	24
Connecting the 10/100Base-T Ethernet Interface.....	25
Connecting Power	26
3 Configuration	27
Introduction	28
Accessing DIP Switch S1	28
Configuring the DIP Switch.....	30
Switch S1-1: Local/Remote Configuration	30
Switches S1-2 and S1-3: Symmetric/Asymmetric Operation	30
Switch S1-5: General Protection (Signal to Noise Ratio)	31
Installing the Protective Cover.....	31
4 Operation	32
Introduction	33
Front Panel LED Status Monitors	33
5 Contacting Patton for assistance	34
Introduction	35
Contact information.....	35
Warranty Service and Returned Merchandise Authorizations (RMAs).....	35
Warranty Coverage	35

Out-of-Warranty Service	35
RMA Numbers	36
Shipping Instructions	36
A Compliance Information	37
Regulatory Information	38
EMC Directive	38
Low-Voltage Directive (Safety)	38
PSTN	38
Radio and TV Interference (FCC Part 15)	38
CE Declaration of Conformity	38
Authorized European Representative	39
Service	39
B Specifications	40
Line Connector	41
LAN Connectors	41
Transmission Line	41
LED Status Indicators	41
Power Supply	41
Physical	41
Operating Temperature Range	41
Humidity	41
Dimensions	41
C Factory Replacement Parts and Accessories	42
CL1211E/CL1212E Factory Replacement Parts and Accessories	43
D Interface Pin Assignment	44
10/100Base-T Interface	45
RJ-45	45
Line Interface	45
RJ-45	45
Terminal Block	46
E Line Rate & Reach Chart	47
Line Rate & Reach Chart Based on 24 AWG (0.5 mm)	48

List of Figures

1	Typical applications	14
2	CL1200E front panel	15
3	Removing the rear panel	18
4	Installing the 35 mm DIN clip	18
5	Installing the rear panel.	19
6	DIN rail types	19
7	Installing the CL1200E onto the DIN rail	20
8	Installing the Rackmount DIN rail onto the rack	21
9	Installing the mounting ears	22
10	Installing the rear panel	22
11	Installing the mounting plate	23
12	RJ-45 pin-out	24
13	CL1200E (terminal block) twisted pair line interface	25
14	CL1212E 10/100Base-T RJ-45 Connector Pin-out.	25
15	Removing protective cover	28
16	DIP switch S1 orientation	29
17	CL1212E front panel	33
18	CL1212E 10/100Base-T RJ-45 Connector Pin-out.	45
19	CL1212E RJ-45 Twisted-Pair Line Interface Connector Pin-out	45
20	CL1212E Line Interface Terminal Block Pin-out	46

List of Tables

1	S1 Summary	30
2	Local/Remote Unit Configuration	30
3	Symmetric/Asymmetric Selection Chart	30
4	Signal to Noise Ratio	31
5	Front panel LED description	33
6	Line Rate & Reach Chart Using Twisted-Pair (Long Range)	48
7	Line Rate & Reach Chart Using Twisted-Pair (High Speed)	48

About This Guide

This guide describes the CopperLink Model CL1211E/CL1212E hardware, installation, and basic configuration.

Audience

This guide is intended for the following users:

- Operators
- Installers
- Maintenance technicians

Structure

This guide contains the following chapters and appendices:

- [Chapter 1](#) on page 12 provides information about CL1211E/CL1212E features and capabilities
- [Chapter 2](#) on page 16 provides information about installing the CL1211E/CL1212E interfaces
- [Chapter 3](#) on page 27 provides information about the CL1211E/CL1212E configuration
- [Chapter 4](#) on page 32 provides information about the CL1211E/CL1212E operation
- [Chapter 5](#) on page 34 describes how to contact Patton technical support for assistance
- [Appendix A](#) on page 37 provides compliance information for the CL1211E/CL1212E
- [Appendix B](#) on page 40 provides specifications for the CL1211E/CL1212E
- [Appendix C](#) on page 42 provides a table of replacements for parts and accessories
- [Appendix D](#) on page 44 provides diagrams of detailed pin assignments
- [Appendix E](#) on page 47 provides a line range and reach chart for the CL1211E/CL1212E

For best results, read the contents of this guide *before* you install the CopperLink CL1211E/CL1212E.

Precautions

Notes and cautions, which have the following meanings, are used throughout this guide to help you become aware of potential Router modem problems. **Warnings** relate to personal injury issues, and **Cautions** refer to potential property damage.

A note presents additional information or interesting sidelights.



The alert symbol and **IMPORTANT** heading calls attention to important information.



The alert symbol and **CAUTION** heading indicate a potential hazard. Strictly follow the instructions to avoid property damage.



The shock hazard symbol and **CAUTION** heading indicate a potential electric shock hazard. Strictly follow the instructions to avoid property damage caused by electric shock.



The alert symbol and **WARNING** heading indicate a potential safety hazard. Strictly follow the warning instructions to avoid personal injury.



The shock hazard symbol and **WARNING** heading indicate a potential electric shock hazard. Strictly follow the warning instructions to avoid injury caused by electric shock.

Safety When Working With Electricity



- **This device contains no user serviceable parts. This device can only be repaired by qualified service personnel.**
- **Do not open the device when the power cord is connected. For systems without a power switch and without an external power adapter, line voltages are present within the device when the power cord is connected.**
- **For devices with an external power adapter, the power adapter shall be a listed Limited Power Source. The mains outlet that is utilized to power the device shall be within 10 feet (3 meters) of the device, shall be easily accessible, and protected by a circuit breaker in compliance with local regulatory requirements.**
- **For AC powered devices, ensure that the power cable used meets all applicable standards for the country in which it is to be installed.**
- **For AC powered devices which have 3 conductor power plugs (L1, L2 & GND or Hot, Neutral & Safety/Protective Ground), the wall outlet (or socket) must have an earth ground.**
- **For DC powered devices, ensure that the interconnecting cables are rated for proper voltage, current, anticipated temperature, flammability, and mechanical serviceability.**
- **WAN, LAN & PSTN ports (connections) may have hazardous voltages present regardless of whether the device is powered ON or OFF. PSTN relates to interfaces such as telephone lines, FXS, FXO, DSL, xDSL, T1, E1, ISDN, Voice, etc. These are known as “hazardous network voltages” and to avoid electric shock use caution when working near these ports. When disconnecting cables for these ports, detach the far end connection first.**
- **Do not work on the device or connect or disconnect cables during periods of lightning activity.**



In accordance with the requirements of council directive 2002/96/EC on Waste of Electrical and Electronic Equipment (WEEE), ensure that at end-of-life you separate this product from other waste and scrap and deliver to the WEEE collection system in your country for recycling.



This device contains no user serviceable parts. This device can only be repaired by qualified service personnel.



This device is NOT intended nor approved for connection to the PSTN. It is intended only for connection to customer premise equipment.



Electrostatic Discharge (ESD) can damage equipment and impair electrical circuitry. It occurs when electronic printed circuit cards are improperly handled and can result in complete or intermittent failures. Do the following to prevent ESD:

- Always follow ESD prevention procedures when removing and replacing cards.
- Wear an ESD-preventive wrist strap, ensuring that it makes good skin contact. Connect the clip to an unpainted surface of the chassis frame to safely channel unwanted ESD voltages to ground.
- To properly guard against ESD damage and shocks, the wrist strap and cord must operate effectively. If no wrist strap is available, ground yourself by touching the metal part of the chassis.

Chapter 1 **General information**

Chapter contents

- Overview 13
- Features 13
- Description..... 13
- Front panel description..... 15

Overview

Thank you for purchasing this Patton Electronics product. This product has been thoroughly inspected and tested and is warranted for one year for parts and labor. If any questions or problems arise during installation or use of this product, contact Patton Electronics Technical Support at +(301) 975-1007.

Features

- Variable rate CopperLink Ethernet extender - Easy to configure
- Auto-MDIX Ethernet
- Configurable 10/100, Full/Half, and Auto-Negotiating Ethernet
- Extends up to 1 or 2 10/100Base-TX Ethernet beyond 328-foot (100-meter) limitation over a single twisted-pair, Cat 5e/6/7
- Variable line rate settings via DIP switch
- Transparent operation
- LED indicators for Power, Line, Local, Remote, Ethernet 0 and 1 (Eth 0 and Eth 1), and Ethernet Link/Activity
- -4 to 158°F (-20 to 70°C) operating temperature; optional conformal coating for protection against condensing humidity and corrosion.

Description

Patton Electronics CL1212E Ethernet extenders provide high-speed LAN connections between peered Ethernet LANs, remote PCs, or any other network-enabled 10/100Base-T device.

Operating in pairs, one CL1212E is configured as the (L) Local unit located at one end of the LAN extension and the other CL1212E is configured as the (R) Remote unit at the other end. The CL1212E is configured as an L or R via the switch on the bottom of the unit. These units can automatically forward LAN broadcasts, multicasts, and frames across a 2-wire voice-grade twisted-pair. The data is passed transparently (unmodified) through the CL1212E. The CL1212Es automatically add and delete MAC addresses, only passing packets across the Line link that are meant for the remote peered LAN.

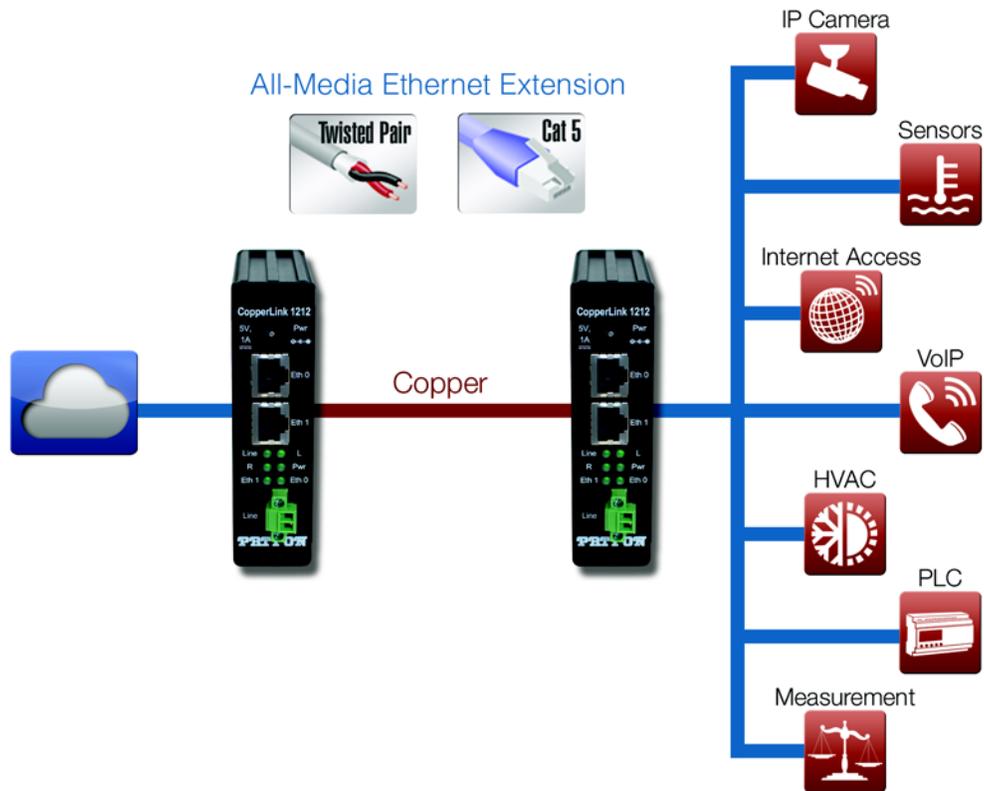


Figure 1. Typical applications

The pair of CL1200E models work together to create a transparent extension between two peered Ethernet LANs using twisted pair (2-wire) or Cat5+. [Figure 1](#) shows typical applications.

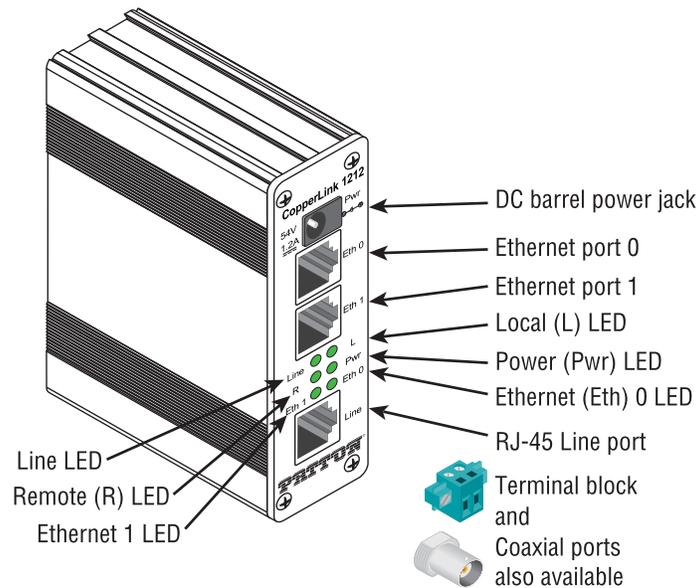


Figure 2. CL1200E front panel

Front panel description

The following describes the ports and indicators for the CL1200E (see [figure 2](#)):

- **Line**—The extension interface used for sending data and power.
 - / **RJ-45**—Interface for two, four, six or eight wires—pin-out to TIA/EIA T568A/B (see section “[RJ-45](#)” on page 46 for more information).
 - / **Terminal Block**—Interface for a single pair of wires; 16–28 AWG (see section “[Terminal Block](#)” on page 46 for more information).
- **Ethernet**—10/100 Full duplex port. Left LED (green) indicates link (solid) and activity (blinking). Right LED (yellow) indicates connection rate, 10 Mb (off) and 100Mb (solid). See section “[10/100Base-T Interface](#)” on page 45 for more information.
- **Power**—Power input jack; center positive.

Chapter 2 Installation

Chapter contents

- Planning the Installation.....17
- Installing accessories17
 - Installing the DIN Rail Installation Kit; 35MM (INS/A-DIN-35)17
 - Installing the 19" Rackmount Adjustable Depth 35MM DIN Rail Kit (NS-1001R-19ADJDIN)20
 - Installing the Mounting Ears Installation Kit (INS-KIT-MNTEARS)21
 - Installing the Mounting Plate Installation Kit (INS-KIT-MNTPLATE)23
- Connecting the Line Interface23
 - Connecting the RJ-45 Line Interface24
 - Connecting the Terminal Block Line Interface24
- Connecting the 10/100Base-T Ethernet Interface.....25
- Connecting Power26

Planning the Installation



The Interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

To install the CL1200E Ethernet Extender, do the following:

1. Install accessories (see section “[Installing accessories](#)”)
2. Connect a cable to the *Line* interface (see section “[Connecting the Line Interface](#)”)
3. Connect an Ethernet cable to the *Ethernet* interface (see section “[Connecting the 10/100Base-T Ethernet Interface](#)” on page 25)
4. Connect the power supply cable to the *Pwr* port (see section “[Connecting Power](#)” on page 26)

Installing accessories

Note If the only accessory your device has is the power cord, proceed to section “[Connecting the Line Interface](#)” on page 23.

This section describes installing the following accessories that may have been purchased along with the CL1200E:

- DIN Rail Installation Kit; 35MM (see section “[Installing the DIN Rail Installation Kit; 35MM \(INS/A-DIN-35\)](#)”)
- 19" Rackmount Adjustable Depth 35MM DIN Rail Kit (see section “[Installing the 19" Rackmount Adjustable Depth 35MM DIN Rail Kit \(NS-1001R-19ADJDIN\)](#)” on page 20)
- Mounting Ears Installation Kit (see section “[Installing the Mounting Ears Installation Kit \(INS-KIT-MNTEARS\)](#)” on page 21)
- Mounting Plate Installation Kit (see section “[Installing the Mounting Plate Installation Kit \(INS-KIT-MNTPLATE\)](#)” on page 23)

Installing the DIN Rail Installation Kit; 35MM (INS/A-DIN-35)

Do the following to install the DIN Rail installation kit:

1. Using a cross-tip screwdriver, remove the four screws from the rear panel of the CL1200E as shown in [figure 3](#) on page 18.

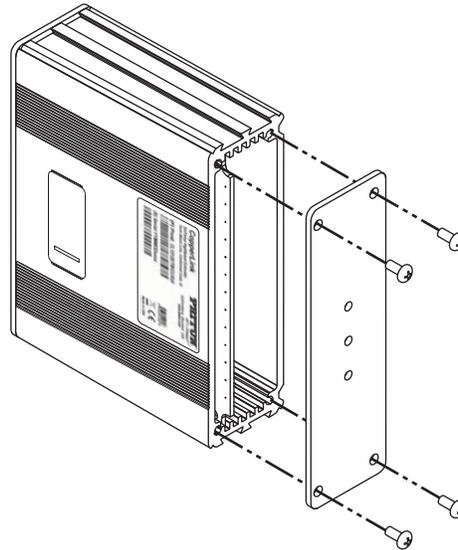


Figure 3. Removing the rear panel

2. Install the 35mm DIN clip onto the rear panel using the self-tapping screws (included in the installation kit package) as shown in [figure 4](#).

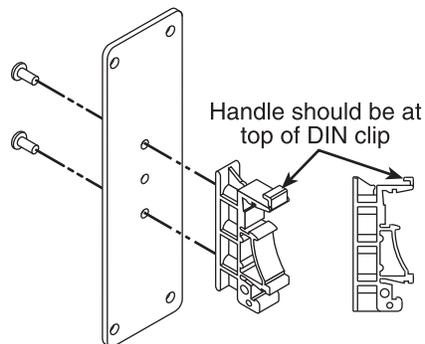


Figure 4. Installing the 35 mm DIN clip

3. Install the rear panel onto the CL1200E enclosure using the screws removed in step 1 as shown in [figure 5](#) on page 19.

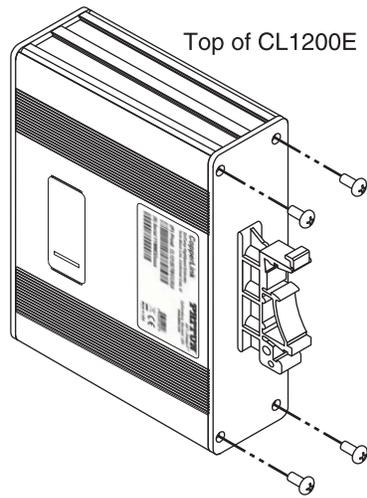


Figure 5. Installing the rear panel.

4. The mounting clip can be attached to the following types of DIN rail (see [figure 6](#)):
- Top hat section types NS 35/7.5 (35 H × 7.5 D mm) and NS 35/15 (35 H × 15 D mm)
 - G section type NS 32

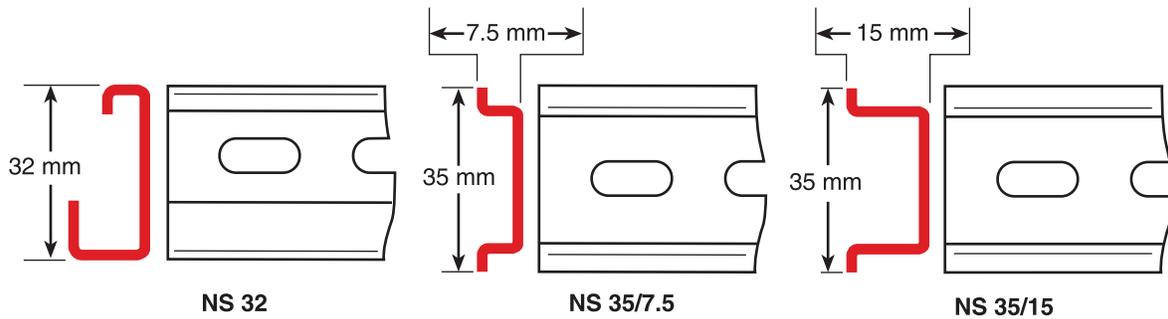


Figure 6. DIN rail types

Install the CL1200E to the DIN rail by attaching the appropriate slot on the 35mm clip to the lower DIN rail lip (see callout 1 on [figure 7](#)).

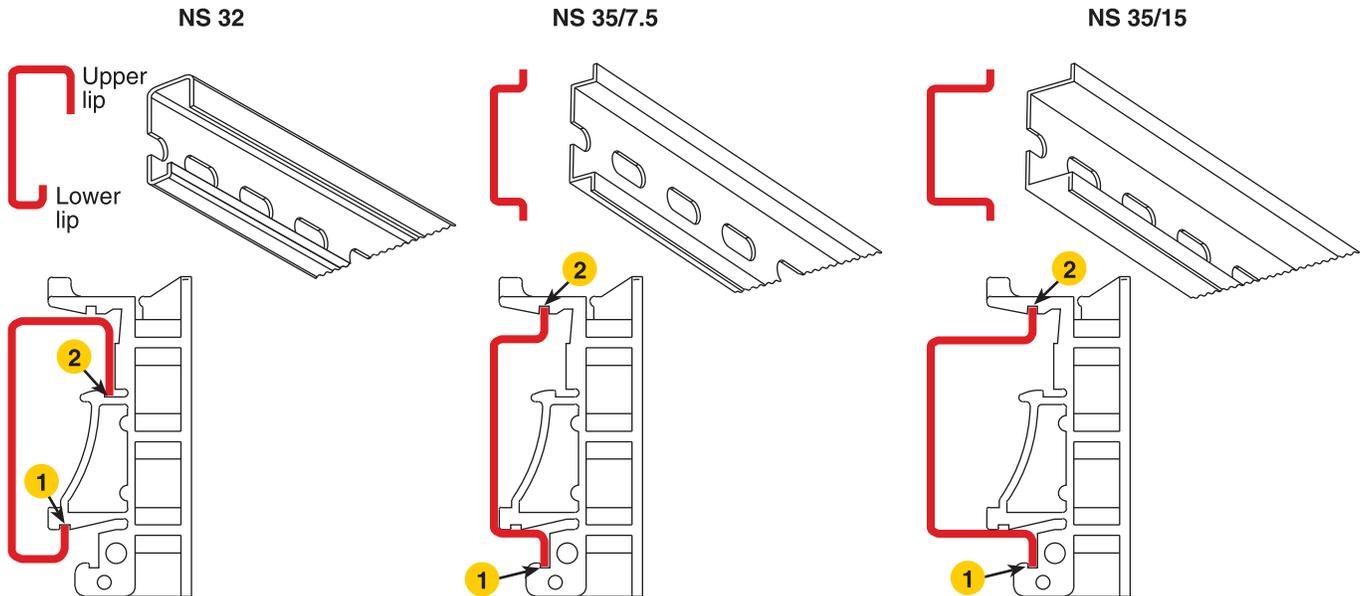


Figure 7. Installing the CL1200E onto the DIN rail

5. Rotate the CL1200E until the upper DIN rail lip fits into the appropriate slot on the 35mm clip (see callout 2 on [figure 7](#)).

The CL1200E has been installed on the DIN rail; proceed to section “[Connecting the Line Interface](#)” on page 23.

Installing the 19" Rackmount Adjustable Depth 35MM DIN Rail Kit (NS-1001R-19ADJDIN)

Do the following to install the 19-inch Rackmount DIN Rail installation kit:

1. Place the mounting rail at the desired location on the rack, and secure it using the mounting hardware included in the installation kit as shown in [figure 8](#) on page 21.

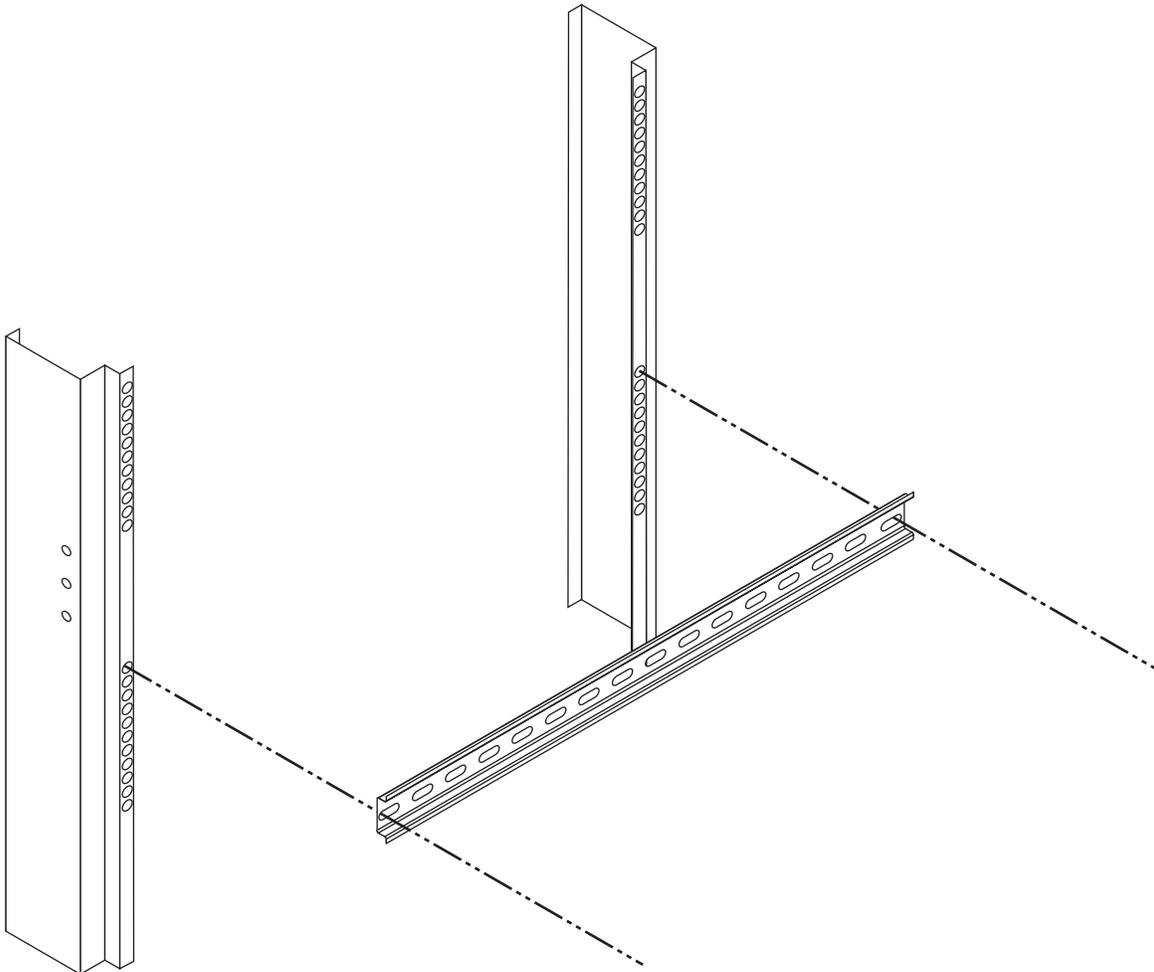


Figure 8. Installing the Rackmount DIN rail onto the rack

2. Refer to section “[Installing the DIN Rail Installation Kit; 35MM \(INS/A-DIN-35\)](#)” on page 17, and perform steps 1 through 5 to install the CL1200E onto the rail.

The CL1200E has been installed on the rack; proceed to section “[Connecting the Line Interface](#)” on page 23.

Installing the Mounting Ears Installation Kit (INS-KIT-MNTEARS)

Do the following to install the mounting ears installation kit:

1. Using a cross-tip screwdriver, remove the four screws from the rear panel of the CL1200E as shown in [\(figure 3 on page 18\)](#).

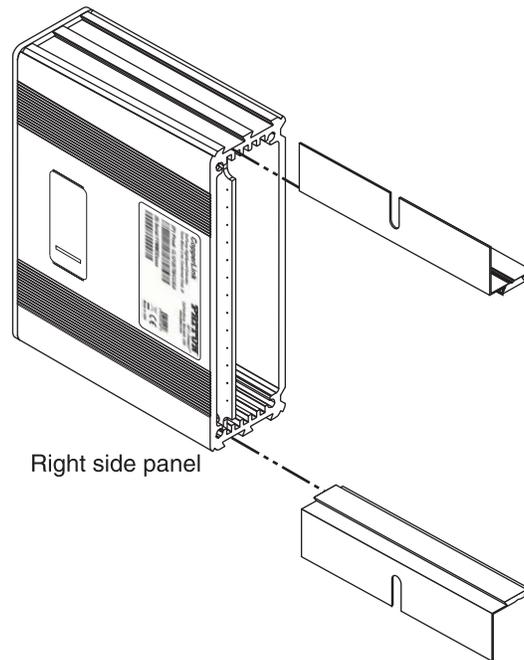


Figure 9. Installing the mounting ears

2. Slide a mounting ear into the top slot closest to the CL1200E back panel as shown in [figure 9](#).
3. Slide the remaining mounting ear into the bottom slot closest to the CL1200E right side panel (see [figure 9](#)).
4. Install the rear panel onto the CL1200E enclosure using the screws removed in step 1 as shown in [figure 10](#).

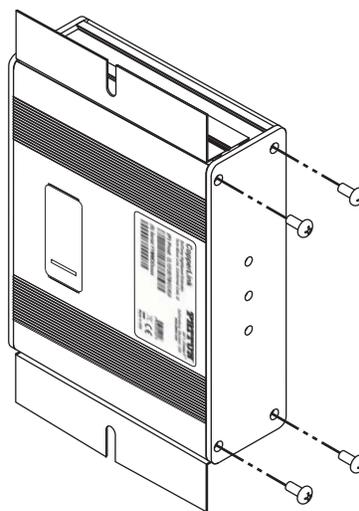


Figure 10. Installing the rear panel

- Place the CL1200E at the desired location, and install it using hardware appropriate for the type of mounting surface.

The mounting ears have been installed on the CL1200E; proceed to section “[Connecting the Line Interface](#)” on page 23.

Installing the Mounting Plate Installation Kit (INS-KIT-MNTPLATE)

Do the following to install the mounting plate installation kit:

- Using a cross-tip screwdriver, remove the four screws from the rear panel of the CL1200E as shown in [figure 3](#) on page 18).

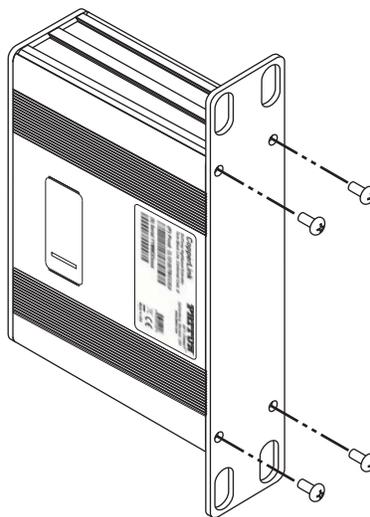


Figure 11. Installing the mounting plate

- Install the mounting plate onto the CL1200E enclosure using the screws removed in step 1 as shown in [figure 11](#).
- Place the CL1200E at the desired location, and install it using hardware appropriate for the type of mounting surface.

The mounting plate has been installed on the CL1200E; proceed to section “[Connecting the Line Interface](#)” on page 23.

Connecting the Line Interface



The interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

The CL1200E supports communication between two peer Ethernet LAN devices over a distance of up to 3300 ft (1 km) over 24 AWG (0.5 mm) twisted-pair wire, Cat5+, or 75-ohm BNC. The CL1200E will be equipped with one of the following interfaces:

- RJ-45 (see section “Connecting the RJ-45 Line Interface”)
- Terminal block (see section “Connecting the Terminal Block Line Interface” on page 24)

Note The CL1200E units work in pairs. The CL1200E/L connects to the CL1200E/R.

Note Actual distance and link performance may vary depending on the environment and type/gauge of wire used.

Connecting the RJ-45 Line Interface

Do the following to connect the *Line* interface.

1. To function properly, the two CL1200Es must be connected together using twisted-pair, unconditioned, dry, metal wire, between 19 (0.9mm) and 26 AWG (0.4mm). Leased circuits that run through signal equalization equipment are not acceptable.
2. The CL1200E is equipped with an RJ-45 interface jack (see [figure 2](#) on page 15)

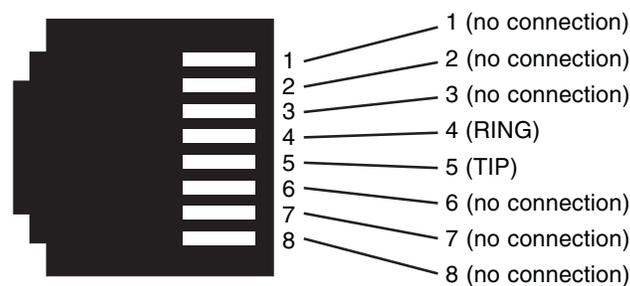


Figure 12. RJ-45 pin-out

3. The RJ-45 connector on the CL1200E's twisted pair interface is polarity insensitive and is wired for a two-wire interface. The signal/pin relationship is shown in ([see figure 12](#)).

Connecting the Terminal Block Line Interface

Do the following to connect the *Line* interface:

1. To function properly, the two CL1200Es must be connected together using twisted-pair, unconditioned, dry, metal wire, between 19 (0.9mm) and 26 AWG (0.4mm). Leased circuits that run through signal equalization equipment are not acceptable.
2. The CL1200E is equipped with a terminal block (see [figure 13](#))

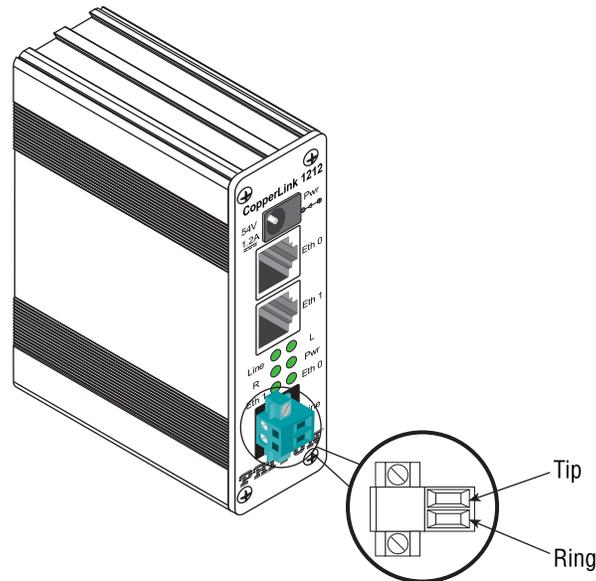


Figure 13. CL1200E (terminal block) twisted pair line interface

3. The RJ-45 connector on the CL1200E's twisted pair interface is polarity insensitive and is wired for a two-wire interface. The signal/pin relationship is shown in (see [figure 12](#)).

Connecting the 10/100Base-T Ethernet Interface



CAUTION

The interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

The RJ-45 ports labeled *Eth 0* and *Eth 1* are Auto-MDIX 10/100Base-T interfaces. These ports are designed to connect directly to a 10/100Base-T device or network. [Figure 14](#) shows the signal/pin relationships on this interface. You may connect this port to a hub or PC using a straight through or crossover cable that is up to 328 ft long.

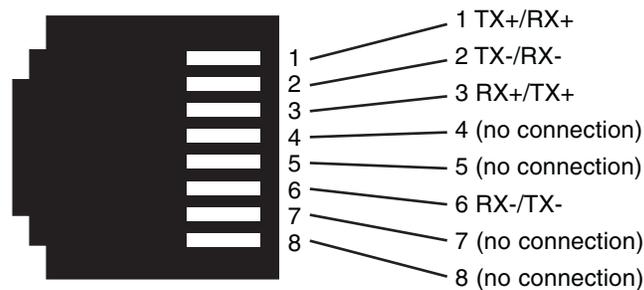


Figure 14. CL1212E 10/100Base-T RJ-45 Connector Pin-out.

Connecting Power



The interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

The CL1212E does not have a power switch, so it powers up as soon as it is plugged in.

An external AC or DC power supply is available separately. This connection is made via the barrel jack on the rear panel of the CL1212E. No configuration is necessary for the power supply.

DC power (supplied via the power supply jack to the CL1212) must meet the following requirements; DC power supplied must be regulated 5 VDC $\pm 5\%$, 1.0A minimum. Center pin is +5 V. The barrel type plug has 2.5/5.5/10mm I.D./O.D./Shaft Length dimensions.



This device is not intended for use with power supplies that provide high instantaneous current (for example: lead acid batteries).

Chapter 3 **Configuration**

Chapter contents

Introduction.....	28
Accessing DIP Switch S1.....	28
Configuring the DIP Switch.....	30
Switch S1-1: Local/Remote Configuration	30
Switches S1-2 and S1-3: Symmetric/Asymmetric Operation	30
Switch S1-5: General Protection (Signal to Noise Ratio)	31
Installing the Protective Cover.....	31

Introduction

The CL1200E has eight DIP switches (S1) for configuring the unit for a wide variety of applications. This section describes switch locations and explains the different configurations.

Accessing DIP Switch S1

1. Using a small flat-tip screwdriver, remove the protective cover located on the right side panel of the CL1200E (see [figure 15](#)).

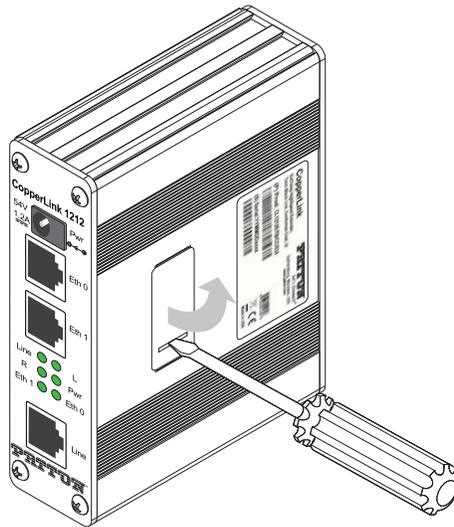


Figure 15. Removing protective cover

2. The DIP switches are externally accessible from the side of the CL1200E. [Figure 16](#) on page 29 shows the orientation of the DIP switches in the On and Off positions.

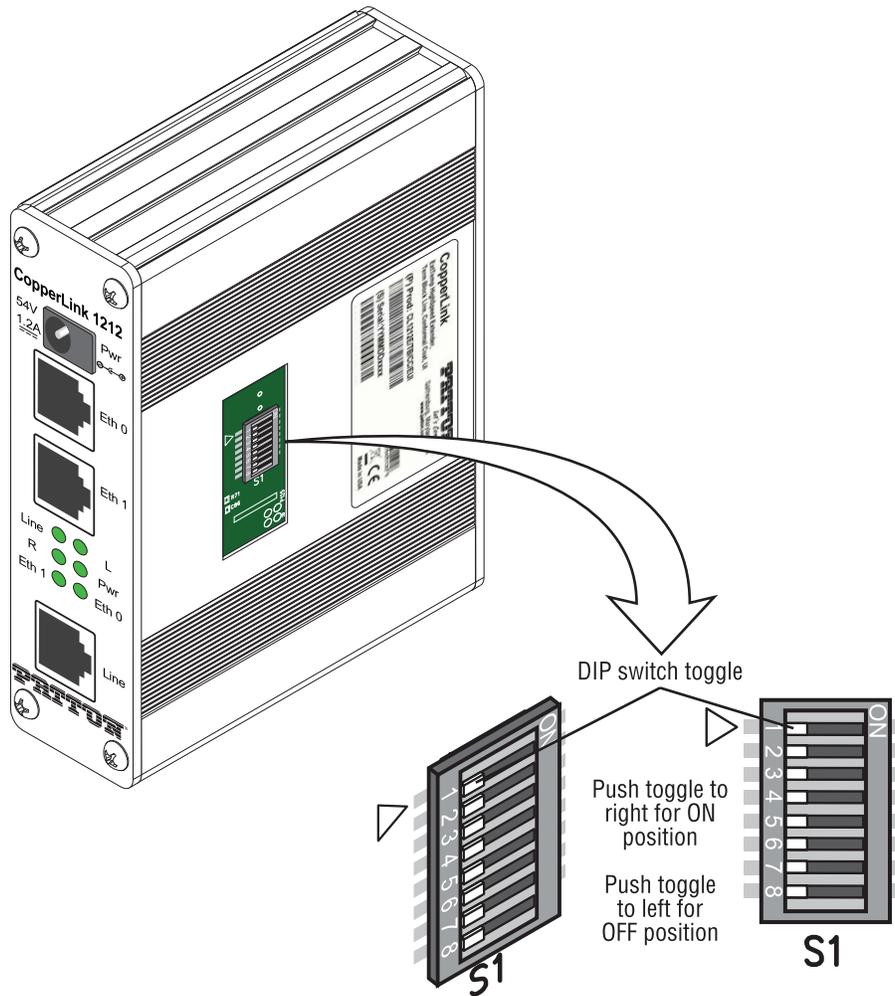


Figure 16. DIP switch S1 orientation

Configuring the DIP Switch

DIP switch S1 (see [figure 16](#) on page 29) is where you configure the Line interface settings. The settings are described in [table 1](#).

Table 1. S1 Summary

Position	Description
S1-1	Local/Remote Configuration
S1-2	Line Rate/Symmetry
S1-3	Line Rate/Symmetry
S1-4	Reserved
S1-5	SNR Margin
S1-6	Reserved
S1-7	Reserved
S1-8	Reserved

Switch S1-1: Local/Remote Configuration

Use switch S1-1 to configure the unit as Remote or Local in the CL1200E pair.

Table 2. Local/Remote Unit Configuration

S1-1	Setting
ON	CPE/Remote
OFF	CO/Local

Switches S1-2 and S1-3: Symmetric/Asymmetric Operation

Use switches S1-2 and S1-3 to configure the line rate type and operation.

Table 3. Symmetric/Asymmetric Selection Chart

S1-2	S1-3	Setting
OFF	OFF	High-Speed "Symmetric"
OFF	ON	High-Speed "Asymmetric"
ON	OFF	FastPath High-Speed "Asymmetric"
ON	ON	Long-Range "Asymmetric"

Note See Appendix E, "Line Rate & Reach Chart" on page 47 for line rate distances.

Switch S1-5: General Protection (Signal to Noise Ratio)

Use switch S1-5 to configure line noise protection.

Table 4. Signal to Noise Ratio

S1-1	Setting
ON	CPE/Remote
OFF	CO/Local

- **6dB:** Original line noise protection with 6dB SNR
- **9dB:** Better line noise protection with SNR up to 9dB

Installing the Protective Cover

Install the protective cover that was removed in step 1 of section “[Accessing DIP Switch S1](#)” on page 28.

The DIP switch S1 is configured.

Chapter 4 **Operation**

Chapter contents

Introduction.....	33
Front Panel LED Status Monitors	33

Introduction

Once the CL1200Es are properly installed, they should operate transparently. No user settings are required. This section describes reading the LED status monitors.

Before applying power to the CL1200E, please review “Connecting Power” on page 26 to verify that the unit is connected to the appropriate power source.

Front Panel LED Status Monitors

The CL1200E features six front panel LEDs that monitor power, the Ethernet signals, the Line connection, and the remote/local setting. Figure 17 shows the front panel location of each LED. Table 5 on page 33 describes the LED functions.

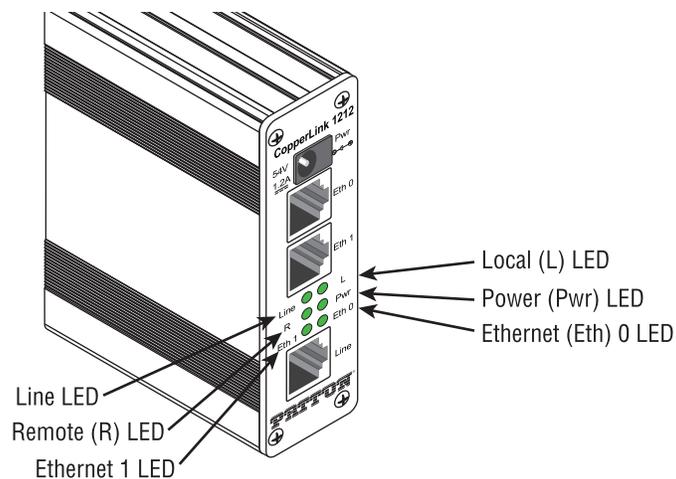


Figure 17. CL1212E front panel

Table 5. Front panel LED description

LED	Status	Description
Pwr (Power)	Green	The device is powered on.
	Off	The device is powered off.
Line	Green	The port is connected.
	Blinking Green	Data transceiving.
	Off	No valid link on this port.
Eth (Ethernet) 0 and Eth 1	Green	The port is connected.
	^a Blinking Green	Data transceiving.
L (Local)	Green	The device acts in Local mode.
	Off	Local mode is off.
R (Remote)	Green	The device acts in Remote mode.
	Off	Remote mode is off.

- a. Once the unit connects to a power source, the LED will blink as the CL1200E automatically looks for the other unit in the pair.

Chapter 5 **Contacting Patton for assistance**

Chapter contents

- Introduction.....35
- Contact information.....35
- Warranty Service and Returned Merchandise Authorizations (RMAs).....35
 - Warranty Coverage35
 - Out-of-Warranty Service35
 - RMA Numbers36
 - Shipping Instructions36

Introduction

This chapter contains the following information:

- “Contact information”—describes how to contact Patton technical support for assistance.
- “Warranty Service and Returned Merchandise Authorizations (RMAs)” —contains information about the warranty and obtaining a return merchandise authorization (RMA).

Contact information

Patton Electronics offers a wide array of free technical services. If you have questions about any of our other products we recommend you begin your search for answers by using our technical knowledge base. Here, we have gathered together many of the more commonly asked questions and compiled them into a searchable database to help you quickly solve your problems:

- Online support—available at www.patton.com
- E-mail support—e-mail sent to support@patton.com will be answered within 1 business day
- Telephone support—standard telephone support is available five days a week—from **8:00 am to 5:00 pm EST (1300 to 2200 UTC)**—by calling **+1 (301) 975-1007**

Warranty Service and Returned Merchandise Authorizations (RMAs)

Patton Electronics is an ISO-9001 certified manufacturer and our products are carefully tested before shipment. All of our products are backed by a comprehensive warranty program.

Note If you purchased your equipment from a Patton Electronics reseller, ask your reseller how you should proceed with warranty service. It is often more convenient for you to work with your local reseller to obtain a replacement. Patton services our products no matter how you acquired them.

Warranty Coverage

Our products are under warranty to be free from defects, and we will, at our option, repair or replace the product should it fail within one year from the first date of shipment. Our warranty is limited to defects in workmanship or materials, and does not cover customer damage, lightning or power surge damage, abuse, or unauthorized modification.

Out-of-Warranty Service

Patton services what we sell, no matter how you acquired it, including malfunctioning products that are no longer under warranty. Our products have a flat fee for repairs. Units damaged by lightning or other catastrophes may require replacement.

RMA Numbers

RMA numbers are required for all product returns. You can obtain an RMA by doing one of the following:

- Completing a request on the RMA Request page in the *Support* section at www.patton.com
- By calling **+1 (301) 975-1007** and speaking to a Technical Support Engineer
- By sending an e-mail to returns@patton.com

All returned units must have the RMA number clearly visible on the outside of the shipping container. Please use the original packing material that the device came in or pack the unit securely to avoid damage during shipping.

Shipping Instructions

The RMA number should be clearly visible on the address label. Our shipping address is as follows:

Patton Electronics Company

RMA#: xxxx

7622 Rickenbacker Dr.

Gaithersburg, MD 20879-4773 USA

Patton will ship the equipment back to you in the same manner you ship it to us. Patton will pay the return shipping costs.

Appendix A **Compliance Information**

Chapter contents

- Regulatory Information38
 - EMC Directive38
 - Low-Voltage Directive (Safety)38
 - PSTN38
- Radio and TV Interference (FCC Part 15)38
- CE Declaration of Conformity38
- Authorized European Representative39
- Service39

Regulatory Information

EMC Directive

- FCC Part 15, Class A
- EN55022, Class A
- EN55024
- EN50581

Low-Voltage Directive (Safety)

- IEC/EN60950-1, 2nd Edition
- UL60950-1/CSA C22.2 No. 60950-1

PSTN

This device is not intended nor approved for connection to the PSTN

Radio and TV Interference (FCC Part 15)

This device generates and uses radio frequency energy, and if not installed and used properly—that is, in strict accordance with the manufacturer’s instructions—may cause interference to radio and television reception. The device has been tested and found to comply with the limits for a Class A computing device in accordance with specifications in Subpart B of Part 15 of FCC rules, which are designed to provide reasonable protection from such interference in a commercial installation. However, there is no guarantee that interference will not occur in a particular installation. If the device does cause interference to radio or television reception, which can be determined by disconnecting the unit, the user is encouraged to try to correct the interference by one or more of the following measures: moving the computing equipment away from the receiver, re-orienting the receiving antenna and/or plugging the receiving equipment into a different AC outlet (such that the computing equipment and receiver are on different branches).

CE Declaration of Conformity

We certify that the apparatus identified above conforms to the requirements of Council Directive 2014/30/EU on the approximation of the laws of the member states relating to electromagnetic compatibility; Council Directive 2014/35/EU on the approximation of the laws of the member states relating to electrical equipment designed for use within certain voltage limits; Council Directive 2011/65/EU on the approximation of the laws of the member states relating to RoHS compliance; and Council Directive 2009/125/EC establishing a framework for the setting of ecodesign requirements for energy-related products.

The safety advice in the documentation accompanying this device shall be obeyed. The conformity to the above directive is indicated by CE mark on the device.

Authorized European Representative

D R M Green
European Compliance Services Ltd
Greyfriars Court
Paradise Square
Oxford, OX1 1BE, UK

Service

All warranty and non-warranty repairs must be returned freight prepaid and insured to Patton Electronics. All returns must have a Return Materials Authorization number on the outside of the shipping container. This number may be obtained from Patton Electronics Technical Services at:

- Tel: +1 (301) 975-1007
- Email: support@patton.com
- URL: <http://www.patton.com>

Packages received without an RMA number will not be accepted.

Appendix B Specifications

Chapter contents

- Line Connector41
- LAN Connectors41
- Transmission Line41
- LED Status Indicators41
- Power Supply41
- Physical41
 - Operating Temperature Range41
 - Humidity41
 - Dimensions41

Line Connector

- RJ-45, Coax or Terminal Block

LAN Connectors

- CL1212E: 2 RJ-45, 10/100Base-T, IEEE 802.3 Ethernet
- CL1211E: 1 RJ-45, 10/100 Base-T, IEEE 802.3 Ethernet

Transmission Line

Two-wire unconditioned twisted pair

LED Status Indicators

- Pwr (Power) (Green)
- Line (Green)
- L (Local) (Green)
- R (Remote) (Green)
- Eth (Ethernet) 0 and 1 (Green when linked; flashing green when transceiving data)

Power Supply

- AC: 120 VAC, 220 VAC, and UI (120–240 VAC)
- DC: 12 VDC, 24 VDC and 48 VDC, 5 VDC
- Power consumption: 1 A at 5 VDC

Physical

Operating Temperature Range

-4 to 158°F (-20 to 70°C)

Humidity

Up to 90% non-condensing.

Optional conformal coating for 85% condensing humidity and protection from corrosion

Dimensions

5.57W x 1.12H x 3.57D in. (14.15W x 2.8H x 9.07D cm) with bracket ears

4.44W x 1.12H x 3.57D in. (11.28 x 2.84H x 9.07D cm) without bracket ears

Appendix C **Factory Replacement Parts and Accessories**

Chapter contents

CL1211E/CL1212E Factory Replacement Parts and Accessories.....43

CL1211E/CL1212E Factory Replacement Parts and Accessories

Patton Model #	Description
Base Models	
07MCL1212E-UM	User Manual
Power Supplies	
PS-03671H1-004	100–240 VAC (5 V, DC/3 A) Wall mount power adapter
12V-PSM	12 VDC Input Adapter
24V-PSM	24 VDC Input Adapter
48V-PSM	48 VDC Input Adapter
Power Plugs for Universal Input AC Power Supply	
12-130	European replacement plug
12-129	American replacement plug
12-131	United Kingdom plug
12-132	Australian/Chinese plug

Appendix D **Interface Pin Assignment**

Chapter contents

10/100Base-T Interface	45
RJ-45	45
Line Interface	45
RJ-45	45
Terminal Block	46

10/100Base-T Interface

RJ-45

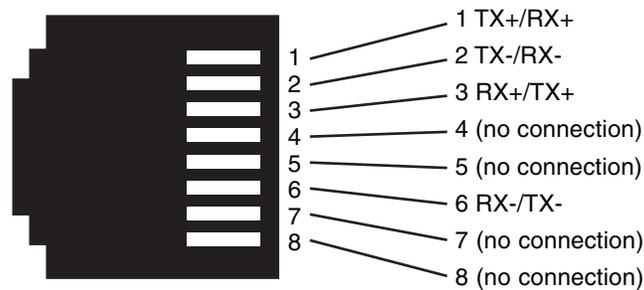


Figure 18. CL1212E 10/100Base-T RJ-45 Connector Pin-out.

Line Interface

RJ-45

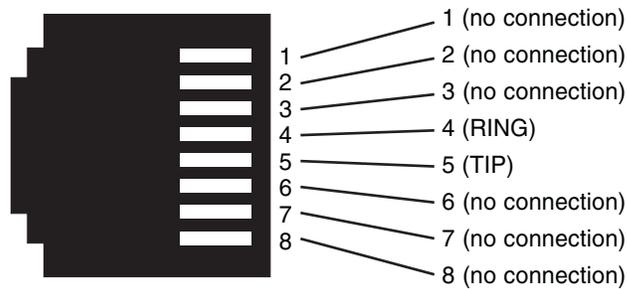


Figure 19. CL1212E RJ-45 Twisted-Pair Line Interface Connector Pin-out

Terminal Block

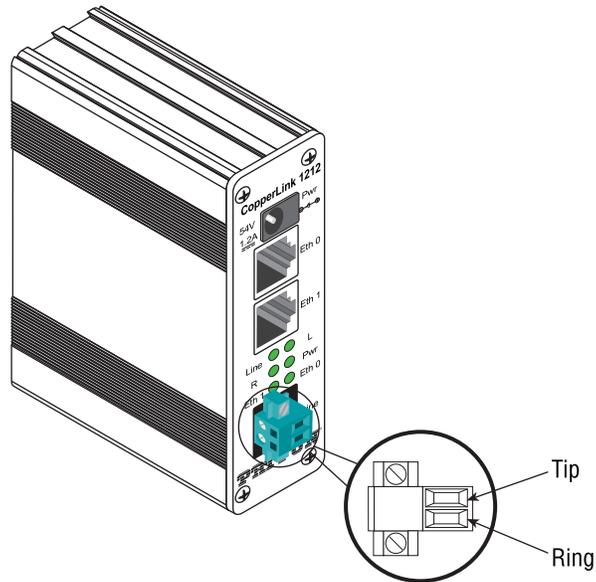


Figure 20. CL1212E Line Interface Terminal Block Pin-out

Appendix E **Line Rate & Reach Chart**

Chapter contents

Line Rate & Reach Chart Based on 24 AWG (0.5 mm)48

Line Rate & Reach Chart Based on 24 AWG (0.5 mm)

Table 6. Line Rate & Reach Chart Using Twisted-Pair (Long Range)

Mode (Long Range)	Distance in Feet		Mbps	
	ft	m/km	DS	US
Asymmetric S1-2 ON S1-3 ON	250 ft	76 m	67	16
	1000 ft	305 m	59	16
	2,000 ft	610 m	45	11
	3,000 ft	914 m	31	5
	5,000 ft	1.5 km	17	682 kbps
	10,000 ft	3 km	4	263 kbps

Note The actual distance and link performance may vary depending on the environment and type/gauge of wire used.

Note DS = downstream, US = upstream.

Table 7. Line Rate & Reach Chart Using Twisted-Pair (High Speed)

Mode (High Speed)	Distance in Feet		Mbps		
	ft	m/km	DS	US	
Symmetric S1-2 OFF S1-3 OFF	250 ft	76 m	121	144	
	1000 ft	305 m	73	103	
	2,000 ft	610 m	45	37	
	3,000 ft	914 m	46	10	
	3,500 ft	1 km	30	4	
Asymmetric S1-2 OFF S1-3 ON	Standard	250 ft	76 m	168	95
		1000 ft	305 m	126	54
	FastPath	2,000 ft	610 m	60	21
		3,000 ft	914 m	42	6
S1-2 ON S1-3 OFF	FastPath	3,500 ft	1 km	35	1

Note The actual distance and link performance may vary depending on the environment and type/gauge of wire used

Note DS = downstream, US = upstream