



LMX-3228G-10G-SFP Series

**32-Port Industrial Gigabit Managed Ethernet Switch, with 4*10/100/1000Tx Ports,
24*100/1000 SFP Slots, and 4*1G/10G SFP+ Slots**



Hardware Manual

Version 1.0
(April 2022)



© Copyright 2022 Antaira Technologies, LLC

All rights reserved

This document contains information, which is protected by copyright. Reproduction, adaptation, or translation without prior permission is prohibited, except as allowed under the copyright laws.

Trademark Information

Antaira is a registered trademark of Antaira Technologies, LLC, Microsoft Windows and the Windows logo are the trademarks of Microsoft Corp. NetWare is the registered trademark of Novell Inc. WMM and WPA are the registered trademarks of Wi-Fi Alliance. All other brand and product names are trademarks or registered trademarks of their respective owners.

Notice: Copyright © 2022 by Antaira Technologies, LLC. All rights reserved. Reproduction, adaptation, or translation without prior permission of Antaira Technologies, LLC is prohibited, except as allowed under the copyright laws.

Disclaimer

Antaira Technologies, LLC provides this manual without warranty of any kind, expressed or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Antaira Technologies, LLC may make improvements and/or changes to the product and/or specifications of the product described in this manual, without prior notice. Antaira Technologies, LLC will not be liable for any technical inaccuracies or typographical errors found in this guide. Changes are periodically made to the information contained herein and will be incorporated into later versions of the manual. The information contained is subject to change without prior notice.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

Avertissement FCC

Cet équipement a été testé et déclaré conforme aux limites d'un appareil numérique de classe A, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie radiofréquence. Cela peut provoquer des interférences nuisibles aux communications radio si l'équipement n'est pas installé et utilisé conformément aux instructions. Cependant, il n'y a aucune garantie qu'aucune interférence ne se produira dans une installation particulière. Si cet équipement provoque des interférences nuisibles à la réception radio ou télévision, ce qui peut être déterminé en éteignant puis en rallumant l'équipement, l'utilisateur est encouragé à essayer de corriger les interférences par une ou plusieurs des mesures suivantes:

- Réorientez ou déplacez l'antenne de réception.
- Augmentez la distance entre l'équipement et le récepteur.
- Connectez l'équipement à une prise sur un circuit différent de celui auquel le récepteur est connecté.
- Consultez le revendeur ou un technicien radio / TV expérimenté pour obtenir de l'aide.

CE Mark Warning

This is a Class-A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Avertissement de marque CE

Ceci est un produit de classe A. Dans un environnement domestique, ce produit peut provoquer des interférences radio, auquel cas l'utilisateur peut être amené à prendre des mesures adéquates.

Industrial Ethernet Switches

Industrial Grade Managed Ethernet Switches

Hardware Manual

Version 1.0 (April 2022)

The manual supports the following models:

- LMX-3228G-10G-SFP-AC
- LMX-3228G-10G-SFP-DC

Antaira Technologies - Industrial Ethernet Switches
LMX-3228G-10G-SFP Series - Hardware Manual - v1.0

- LMX-3228G-10G-SFP-AA
- LMX-3228G-10G-SFP-DD
- LMX-3228G-10G-SFP-AD

This document is the current official release hardware manual. Please check our website (www.antaيرا.com) for any updated manual or contact us by e-mail (support@antaيرا.com).

Table of Contents

1 Overview	1
1.1 Product Hardware Features	1
1.2 Product Software Features	1
1.3 Package Contents	2
1.4 Safety Precaution	2
2 Hardware Description	4
2.1 Physical Dimensions	4
2.2 Front View Panel	5
2.3 Top View Panel	5
2.4 LED Indicators	6
2.5 Reset Button	7
2.6 Ethernet Ports	7
2.7 Cabling	8
2.8 Wiring the Power Inputs	9
2.9 Wiring the Fault Alarm Contact	10
2.10 Grounding Note	10
3 Mounting Installation	12
3.1 DIN-Rail Mounting	12
3.2 Wall Mounting	13
4 Hardware Installation	15
4.1 Installation Steps	15
4.2 Maintenance and Service	16
4.3 Troubleshooting	16
5 Technical Specifications	17

1 Overview

Antaira Technologies' LMX-3228G-10G-SFP Series is a 32-port industrial gigabit managed Ethernet switch embedded with 4*10/100/1000Tx Ethernet ports, 24*100/1000 dual rate SFP slots, and 4*1G/10G dual rate SFP+ slots for fiber connections.

1.1 Product Hardware Features

System Interface and Performance

- All RJ45 ports support Auto MDI/MDI-X Function
- Embedded 4*10/100/1000Tx RJ45 ports, 24*100/1000 SFP slots, and 4*1G/10G SFP+ slots
- Store-and-forward switching architecture
- 32K MAC address table

Power Input

- AC 100~240V redundant or DC -36~60V, with a AC power cable
- The power input specification complies with the requirements of SELV (Safety Extra Low Voltage) and the power supply should comply with UL 61010-1 & UL 61010-2-201

Operating Temperature

- LMX-3228G-10G-SFP: 0°C to 50°C

Case / Installation

- Metal housing
- DIN-Rail and wall-mount design
- Standalone Installation

1.2 Product Software Features

Network Management

- Web UI based management, SNMP v1/v2c/v3, Serial Console
- QoS, traffic classification QoS, Cos, bandwidth control for Ingress and Egress, broadcast, unicast, multicast, storm control, Diffserv
- IEEE 802.1q VLAN tagging, MAC-based, Protocol-based, IP subnet-based VLAN support
- IGMP snooping v1/v2/v3, IGMP filtering / throttling, IGMP query up to 1024 group
- Supports IPv4/IPv6, RMON, MIB II, port mirroring, event syslog, DNS, NTP/SNTP, HTTPS, SSH, TFTP

Port Configuration

- Status, statistics, mirroring, rate limiting, event syslog

Event Handling

- Event notification: Cold/Warm Start, Power Failure, Authentication, SNMP trap and Fault Alarm Relay Output
- Software Upload via TFTP and HTTP

1.3 Package Contents

- LMX-3228G-10G-SFP(-XX)
- DIN-Rail mounting bracket set with screws
- AC power cable
- RJ45 to DB9 serial console cable

1.4 Safety Precaution

Attention: If the DC voltage is supplied by an external circuit, please use a protection device on the power supply input. The industrial Ethernet switch's hardware specs, ports, cabling information, and wiring installation will be described within this hardware manual.

Attention: Si la tension CC est fournie par un circuit externe, veuillez utiliser un dispositif de protection sur l'entrée d'alimentation. Les spécifications matérielles, les ports, les informations de câblage et l'installation du câblage du commutateur Ethernet industriel seront décrits dans ce manuel d'utilisation.

Warning Labels

The caution label means that you should check certain information on the user manual when working with the device. (Shown in *Figure 1.1*)

Étiquettes d'avertissement

L'étiquette d'avertissement signifie que vous devez vérifier certaines informations du manuel d'utilisation lorsque vous travaillez avec l'appareil. (Illustré à la *figure 1.1*)



Figure 1.1 - Caution Label
Figure 1.1 - Étiquette de mise en garde



Figure 1.2 - Hot Surface Warning Label
Figure 1.2 - Étiquette d'avertissement de surface chaude

2 Hardware Description

2.1 Physical Dimensions

Figure 2.1, below, shows the physical dimensions of this product series:

(W x D x H) is 440mm x 250mm x 43.5mm

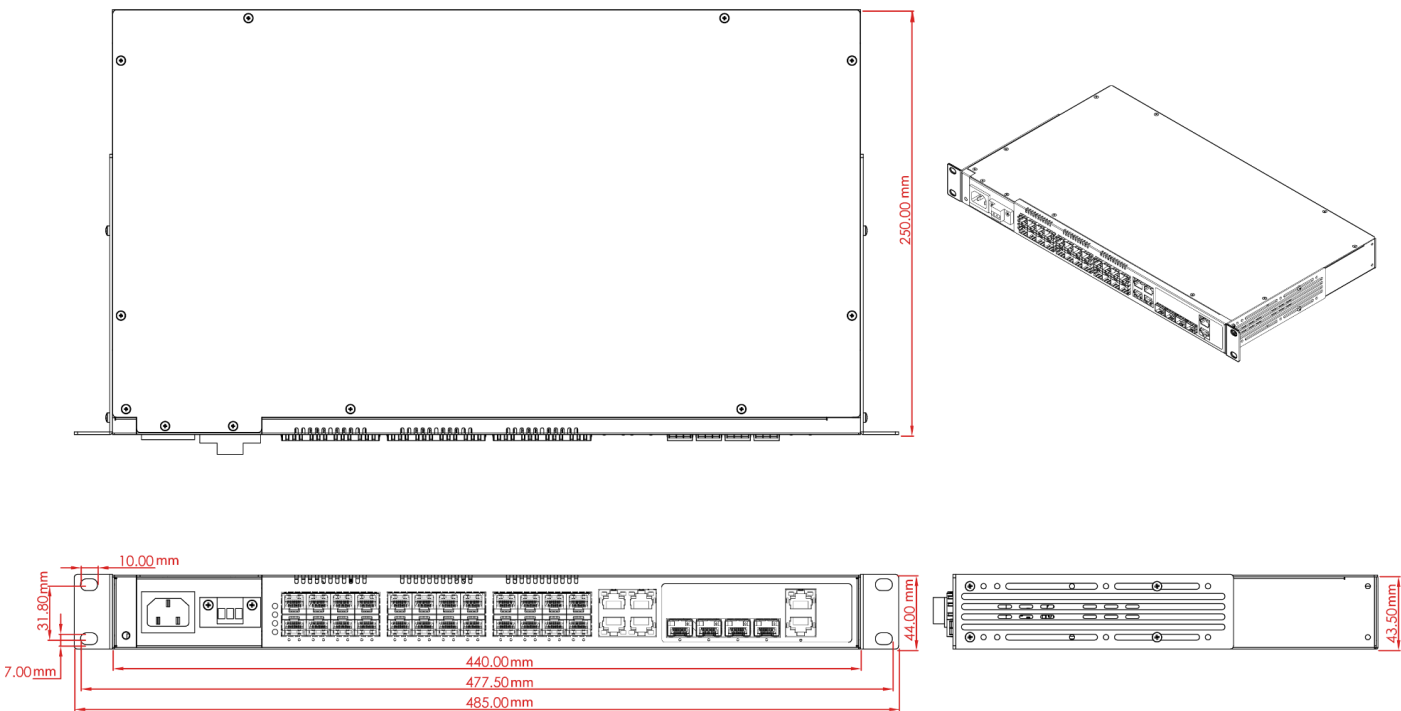


Figure 2.1 - Physical Dimensions

2.2 Front View Panel

Figure 2.2, below, shows the front panel of the product series:

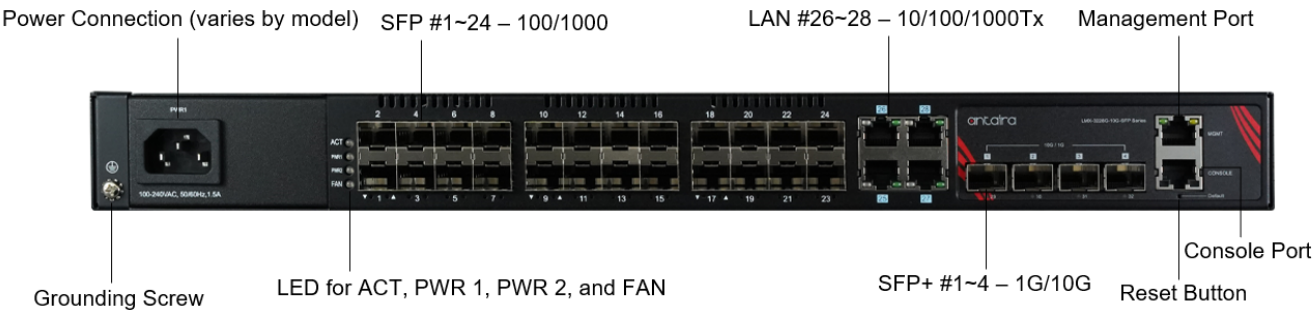


Figure 2.2 - Front View Panel

2.3 Rear View Panel

Figure 2.3, below, shows the rear panel of the product series:



Figure 2.3 - Rear View Panel

2.4 LED Indicators

There are LED light indicators located on the front panel of the Ethernet switch that display the power status and network status. Each LED indicator has a different color and has its own specific meaning, see below in *Table 2.1*.

LED	Color	Description	
P1	Green	On	Power Input 1 is active
		Off	Power Input 1 is inactive

Antaira Technologies - Industrial Ethernet Switches
LMX-3228G-10G-SFP Series - Hardware Manual - v1.0

P2	Green	On	Power Input 2 is active
		Off	Power Input 2 is inactive
ACT	Green	On	The switch is active
	Red	On	Alert
	Off		The switch does not receive power
FAN	Green	On	Fan is working normally
	Red	On	Fan is working abnormally. This indicates fan alarm status.
	Off		Fan module is off
SFP Port 1~24	Green	On	Connected to network, 100Mbps
		Flashing	Networking is active
		Off	Not connected to network
	Amber	On	Connected to network, 1000Mbps
		Flashing	Networking is active
		Off	Not connected to network
LAN Port 25~28	Green	On	Connected to network, 100Mbps
	Amber	On	Connected to network, 1000Mbps
	Green	Flashing	Networking is active
	Green / Amber	Off	Not connected to network
SFP Port 29~32	Orange	On	Connected to network, 1Gbps
		Flashing	Networking is active
		Off	Not connected to network
	Blue	On	Connected to network, 10Gbps
		Flashing	Networking is active
		Off	Not connected to network

Table 2.1 - LED Indicators

Note: "P1" is the abbreviation for "Power 1", "P2" is for "Power 2", "LNK" is for "Link", and "ACT" is for "Activity".

2.5 Reset Button

There is a “reset” button located on the rear panel of the Ethernet switch that helps users to reboot, restore default by pressing the button for different seconds. Please refer to Table 2.2 for the timing and function.

Seconds	Function
7 or more	Restore factory default

Table 2.2 - Reset Button Functions

2.6 Ethernet Ports

- RJ45 Ports

RJ45 Ports (Auto MDI/MDI-X): The RJ45 ports are auto-sensing for 10Base-T, 100Base-TX, or 1000Base-T connections. Auto MDI means that the switch can connect to another switch or workstation without changing the straight-through or crossover cabling. See the figures below for straight-through and crossover cabling schematics.

- RJ45 Pin Assignments

Crossover Cable		Straight Through Cable	
Pin Number / Signal	Pin Number / Signal	Pin Number / Signal	Pin Number / Signal
1 / RX+	3 / TX+	1 / RX+	1 / TX+
2 / RX-	6 / TX-	2 / RX-	2 / TX-
3 / TX+	1 / RX+	3 / TX+	3 / RX+
6 / TX-	2 / RX-	6 / TX-	6 / RX-

Table 2.3 - 10/100Base-T(X) RJ45 Pin Assignments

Crossover Cable		Straight Through Cable	
Pin Number / Signal	Pin Number / Signal	Pin Number / Signal	Pin Number / Signal
1 / TP0+	3 / TP1+	1 / TP0+	1 / TP1+
2 / TP0-	6 / TP1-	2 / TP0-	2 / TP1-
3 / TP1+	1 / TP0+	3 / TP1+	3 / TP0+

4 / TP2+	7 / TP3+	4 / TP2+	4 / TP3+
5 / TP2-	8 / TP3-	5 / TP2-	5 / TP3-
6 / TP1-	2 / TP0-	6 / TP1-	6 / TP0-
7 / TP3+	4 / TP2+	7 / TP3+	7 / TP2+
8 / TP3-	5 / TP2-	8 / TP3-	8 / TP2-

Table 2.4 - 1000Base-T RJ45 Pin Assignments

Note: "+" and "-" signs represent the polarity of the wires that make up each wire pair.

2.7 Cabling

Use the four twisted-pair, category 5e, or the above cabling for the RJ45 port connections. The cable between the switch and the link partner (switch, hub, workstation, etc.) must be less than 100 meters (328 ft.) in length.

The Small Form-Factor Pluggable (SFP) is a compact optical transceiver used in optical communications for both telecommunication and data communication applications.



Caution: Please employ an optional optical transceiver (SFP/Fixed Fiber) that complies with IEC 60825-1, 21 CFR 1040 Section 1040.10 and 1040.11, classified as Class 1 laser product.



Attention: Veuillez utiliser un émetteur-récepteur optique en option (SFP/fibre fixe) conforme à la norme IEC 60825-1, 21 CFR 1040 Section 1040.10 et 1040.11, classé comme produit laser de classe 1.

2.8 Wiring the Power Inputs




Caution: Please follow the steps below when inserting the power wire.



Attention: Veuillez suivre les étapes ci-dessous lors de l'insertion du câble d'alimentation.


AC power module is supplied to the switch (AC models) through a standard IEC C14-3-prong receptacle, located on the front of the module. Any national power cord with IEC C13 line plug may be used to connect AC power to the power module.

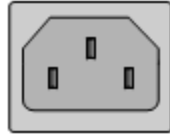

Left: Live line, **Right:** Neutral line, **Middle:** Ground

Figure 2.4 - Power Terminal Block

DC models provide a DC module for power connection. You must connect the switch only to the DC input source that has an input supply voltage from -36 to -60VDC. If the power you use is not in this range, the switch might not operate properly and there is a great possibility that the switch might be damaged.

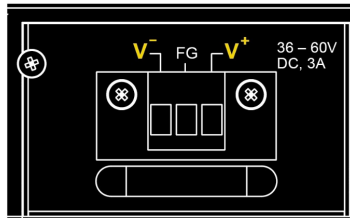

Left: -V, **Right:** +V, **Middle:** Frame Ground

Figure 2.5 - Terminal Block (DC) Power Connector Pin Assignment

2.9 Grounding Note

Grounding and wire routing help limit the effects of noise due to Electromagnetic Interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices. The grounding screw symbol is shown below in *Figure 2.9*.

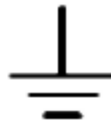


Figure 2.6 - Grounding Screw Symbol



Caution: Using a shielded cable achieves better electromagnetic compatibility.



Attention: L'utilisation d'un câble blindé permet une meilleure compatibilité électromagnétique

3 Mounting Installation

3.1 Rack Mounting

The switch comes with a rack-mounted kit which can be mounted in an EIA standard size, 19-inch rack. It can be placed in a wiring closet with other equipment.

Perform the following steps to rack-mount the switch:

1. Position one plate to align with the holes on one side of the hub and secure it with the smaller plate screws. Then, attach the remaining plate to the remaining plate to the other side of the switch.



Figure 3.1 - Attach Mounting Plates with Screws

2. After attaching both mounting plates, position the switch in the rack by lining up the holes in the plates with the appropriate holes on the rack. Secure the switch to the rack with a screwdriver and the rack-mounting screws.



Figure 3.2 - Rear View of the Switch and DIN-Rail

Note: For proper ventilation, allow at least 4 inches (10 cm) of clearance on the front and 3.4 inches (8 cm) on the back of the switch. This is especially important for enclosed rack installation.

4 Hardware Installation

4.1 Installation Steps

This section will explain how to install the industrial Ethernet switch:



Caution: This device is intended for indoor use.



Attention: Cet appareil est destiné à une utilisation en intérieur.



Caution: The device is intended to be installed in an industrial control enclosure and panel.



Attention: L'appareil est destiné à être installé dans une armoire de commande et un panneau industriels.

Installation Steps

1. Unpack the Ethernet switch from the original packing box.
2. Check if the rack-mount bracket is screwed on the industrial Ethernet switch.
 - If the rack-mount is not screwed on the industrial Ethernet switch, please refer to the **Rack Mounting** section for rack-mount installation.
3. Power on the industrial Ethernet switch and then the power LED light will turn on.
 - For the help on how to wire power, please refer to the **Wiring the Power Inputs** section.
 - Please refer to the **LED Indicators** section for LED light indication.
4. Prepare the twisted-pair, straight-through category 5 cable for Ethernet connection.
5. Insert one side of the RJ45 cable into the switch's Ethernet port and on the other side into the networking device's Ethernet port, e.g. switch PC or server.
 - The Ethernet port's (RJ45) LED on the industrial Ethernet switch will turn on when the cable is connected to the networking device.
 - Please refer to the **LED Indicators** section for LED light indication.
6. When all connections are set and the LED lights all show normal, the installation is complete.

4.2 Maintenance and Service

- If the device requires servicing of any kind, the user is required to disconnect and remove it from its mounting. The initial installation should be done in a way that makes this as convenient as possible.
- Voltage / Power lines should be properly insulated as well as other cables. Be careful when handling them so as to not trip over.
- Do not under any circumstance insert foreign objects of any kind into the heat dissipation holes located in the different faces of the device. This may not only harm the internal layout, but might cause harm to users as well.
- Do not under any circumstance open the device for any reason. Please contact your dealer for any repair needed or follow the instructions within the manual.
- Clean the device with a dry soft cloth.

4.3 Troubleshooting

- Always verify the right power cord or adapter is being used. Never use a power supply or adapter with a non-compliant DC output voltage or it will burn the equipment.
- Select the proper UTP or STP cable in order to construct the network. Use an unshielded twisted-pair (UTP) or shield twisted-pair (STP) cable for RJ45 connections: 100Ω Category 5e for 10/100Mbps. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).
- Diagnosing LED Indicators: To assist in identifying problems, the switch can be easily monitored with the LED indicators which help to identify if any problems exist.
 - Please refer to the LED Indicators section for LED light indication.
- If the power indicator LED does not turn on when the power cord is plugged in, the user may have a problem with the power cord. Check for loose power connections, power losses or surges at the power outlet.
 - Please contact Antaira for technical support service if the problem still cannot be resolved.
- If the industrial switch LED indicators are normal and the connected cables are correct but the packets still cannot transmit, please check the system's Ethernet devices' configuration or status.

5 Technical Specifications

Table 5.1 has the technical specifications for this product series.

Technology	
L2 Switching	Auto MAC address learning/aging, Per port limited MAC address learning, IEEE 802.1Q static VLAN (4K VLAN groups), Voice VLAN, Port isolation, Private VLAN, MAC based VLAN protocol based VLAN IP subnet based VLAN, IEEE 802.1D STP/802.1w RSTP/802.1s MSTP, IEEE 802.3ad Link Aggregation, static and LACP, BPDU guard and restricted role, Error Disable Recovery, DHCP client, DHCP snooping, DHCP option 82 relay, ARP inspection (256 entries Max.), Port mirroring, RSPAN, IGMP snooping v1,v2,v3 snooping, (1024 groups), IGMP snooping Fast and Immediate leave, IGMP throttling, filtering, and leave proxy, MVR and MVR profile, IPv6 MLD v1/v2 snooping
QoS	IEEE 802.1p 8 Priority Queues per Port, Port Based priority, Scheduler priority, QoS Control List (256 entries Max.), Storm control for UC, MC, and BC, Per port/per queue based ingress policing and egress shaping, DiffServ (RFC 2474) remarking, Tag remarking
Protocols	HTTP server, CLI console port, Telnet CLI, Management access filtering, SSHv2 and HTTPS, IPv6 Management, Syslog, Software upload through Web and TFTP, SNMPv1/v2c/v3 Agent, RMON Group 1,2,3, and 9, IEEE 802.1AB-2005 Link Layer Discovery, LLDP, Text Configuration download or upload, Daylight Saving
Security	Port-based 802.1X, Single 802.1X, Multiple 802.1X, MAC-based authentication, VLAN assignment, QoS assignment, Guest VLAN, RADIUS accounting, MAC address limited learning, TACACS+, Web and CLI authentication and authorization, ACL rules based on L2~L4 information, IP source guard
Switch Properties	
Switch Architecture	Back-Plane (Switching Fabric): 136.0Gbps
Processing Type	Store and Forward
Transfer Rate	14,880pps for 10Base-T Ethernet 148,800pps for 100Base-T Fast Ethernet 1,488,000pps for Gigabit Ethernet 14,880,000pps for 10 Gigabit Ethernet
Packet Buffer	32Mbits
Jumbo Frame	10K
MAC Table Size	32K
Configuration	Web Console, CLI
Port Interface	

Antaira Technologies - Industrial Ethernet Switches
LMX-3228G-10G-SFP Series - Hardware Manual - v1.0

Ethernet Port	4*10/100/1000BaseTx Auto-negotiation speed, Full/Half duplex mode, and auto MDI/MDI-X connection
SFP Port	24*100/1000Base Tx SFP slots 4*1G/10G SFP+ slots
Mechanical Characteristics	
LED Indicator	Per Port: Link/Act (Green: Gigabit, Yellow: 10/100M) Per Unit: Power and System
Housing	Metal Housing
Dimensions	440 x 250 x 43.5 mm
Weight	Unit: 7.27 lbs. Shipping: 8.82 lbs.
Mounting	1U Rack-Mount
Power Requirement	
Input Voltage	Depends on model AC Power Input: 100V~240V DC Power Input: -36~-60VDC
Power Connection	AC Power Cable
Power Consumption	60W Max
Environmental Limits	
Operating Temperature	0°C to 50°C
Storage Temperature	-25°C ~ 70°C
Ambient Relative Humidity	10 to 90%, (non-condensing)
Regulatory Approvals	
Warranty	5 Years

Table 5.1 - Technical Specifications

Antaira Customer Service and Support

(Antaira US Headquarter) + 844-268-2472

(Antaira Europe Office) +48-22-862-88-81

(Antaira Asia Office) +886-2-2218-9733

Please report any problems to Antaira:

www.antaira.com / support@antaira.com

www.antaira.eu / info@antaira.eu

www.antaira.com.tw / info@antaira.com.tw

Any changes to this material will be announced on the Antaira website.